CONGRATULATIONS

ON

PURCHASING

SMSEAGLE

SMSEAGLE-NXS-9750

Hardware SMS Gateway

USER'S MANUAL

Document version: 3.0

The materials used in this publication are copyright and are not to be duplicated, copied, or used without the prior consent of the copyright holder. Technical specifications are subject to change without prior notice being given.

CONTENTS

1. GET READY TO START 5
What's in The BOX 6
Prepare for first start 7
2. USING SMSEAGLE 10
Get to know with Connectors, Ports and LEDs 11
Basic Operations 12
SMSEagle features 12
SMSEagle plugins 13
Autoreply plugin 13
Network Monitoring plugin 13
Email to SMS plugin 17
SMS to Email plugin 18
Callback URL plugin 20
SMS Forward 21
Periodic SMS 22
Digital input/output (DI/DO) 23
Multimodem features 26
SMSEagle API 27
Plugins and integration manuals for NMS & Auth systems 71
Connecting directly to SMSEagle database 72
SNMP agent 73
Database cleaning scripts 76
Failover (HA-cluster) feature 77
3. TROUBLESHOOTING 80
Verification of LEDs 81
Checking the device logs 81
When the device is not reachable 81
Restoring factory defaults 82
5. SERVICE AND REPAIR 83
Warranty 84
Service 84
6. TECH SPECS AND SAFETY INFORMATION 85
Technical Specifications 86

Important Safety Information 88
FCC compliance statement..... 89
Canadian regulatory statement 89
Disposal and recycling information 90

1. GET READY TO START

What's in The BOX

Your SMSEagle box contains:

- SMSEagle hardware SMS gateway
- 2x external omnidirectional 3.5dBi GSM antenna (with magnetic foot)
- AC/DC power supply (input voltage: 100-240V)
- Warranty card

Prepare for first start

Your SMSEagle is designed so that you can set it up quickly and start using it right away. Follow the steps below to get started.

Step 1: Connect 3G antenna

Plug in both antenna connectors to the device. Make sure the antennas remain with 20cm spacing from each other.

Step 2: Insert SIM Card

Please install SIM Card when the device is SWITCHED OFF. SIM Card slot is located at the bottom of the device. Use a ball-pen or small screwdriver to eject SIM Card tray. Insert card into tray and push it gently into slot.

Step 3: Power the device

The device is powered with AC/DC power supply adaptor delivered in the box. The device needs a power source of 12V DC to 30V with 27W power.
In order to power the device simply plug in a connector from AC/DC adaptor into the device.

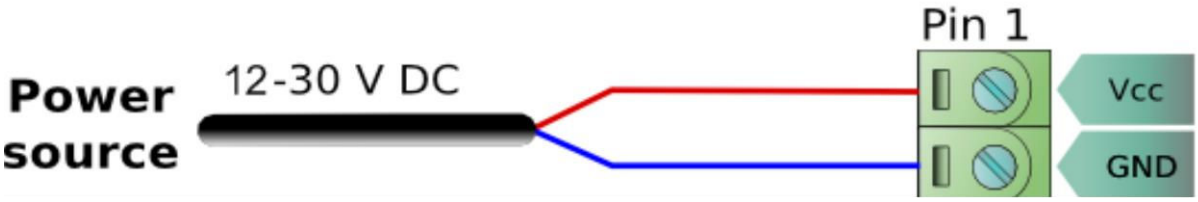

Step 4: Configure IP settings

SMSEAGLE DEFAULT NETWORK CONFIGURATION:

DHCP CLIENT IS ON

(IP ADDRESS WILL BE OBTAINED AUTOMATICALLY FROM YOUR DHCP SERVER)

A)) CONNECT SMSEAGLE TO YOUR LAN AND **OBTAIN IP ADDRESS AUTOMATICALLY**

- connect the device to your LAN using Ethernet cable
- SMSEagle will obtain IP address automatically from your DHCP
- read assigned IP address on your DHCP server

B) **OR** SET IP ADDRESS FOR SMSEAGLE MANUALLY

- connect a display using HDMI connector, connect a keyboard to USB port (note: cables are not provided)
- login to the SSH console using root credentials (these were provided with your device)

- edit configuration file with command:
  mcedit /mnt/nand-user/smseagle/syscfg
  change the following lines:
  HOST_IP= *(set IP address for your device)*
  GW_IP= *(default gateway IP address)*
  NET_MASK= *(set subnet mask)*
  START_DHCP=Y *(set to START_DHCP=N to disable DHCP client)*
- save and exit the file
- shutdown the device
- now connect SMSEagle to your LAN using Ethernet cable

C) LOG IN TO SMSEAGLE

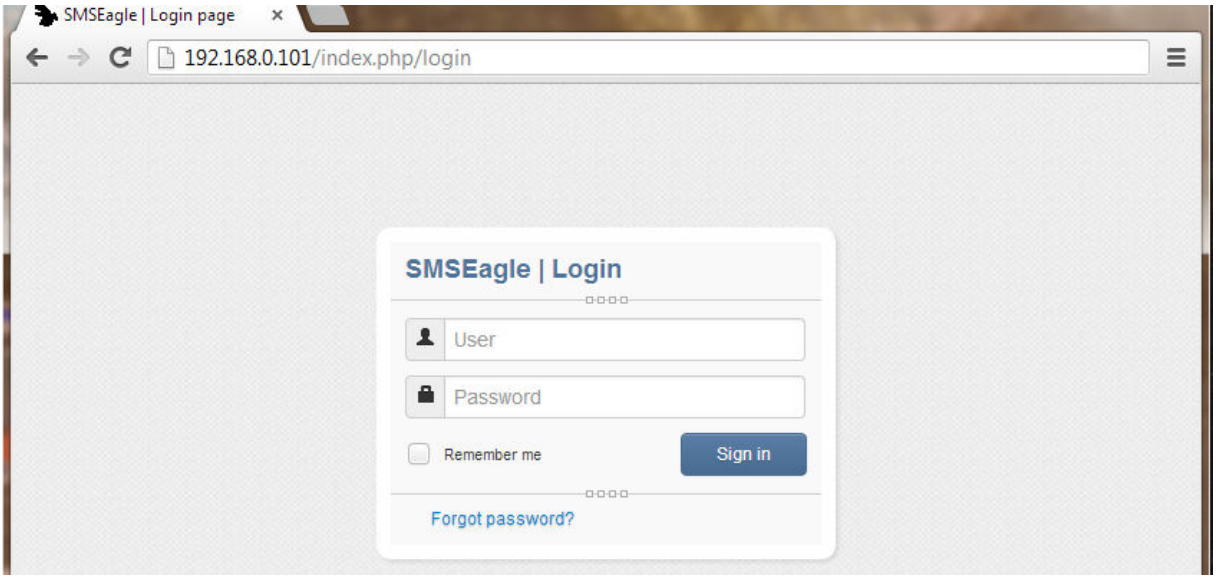

Open an internet browser on your PC and go to the IP address assigned to your gateway

SMSEAGLE DEFAULT USER IS:
Username: admin
Password: password

Login to application with above username and password.

D) CONFIGURE STATIC IP SETTINGS (OPTIONAL)

Click on menu position “Settings” and navigate to tab “IP Settings”.

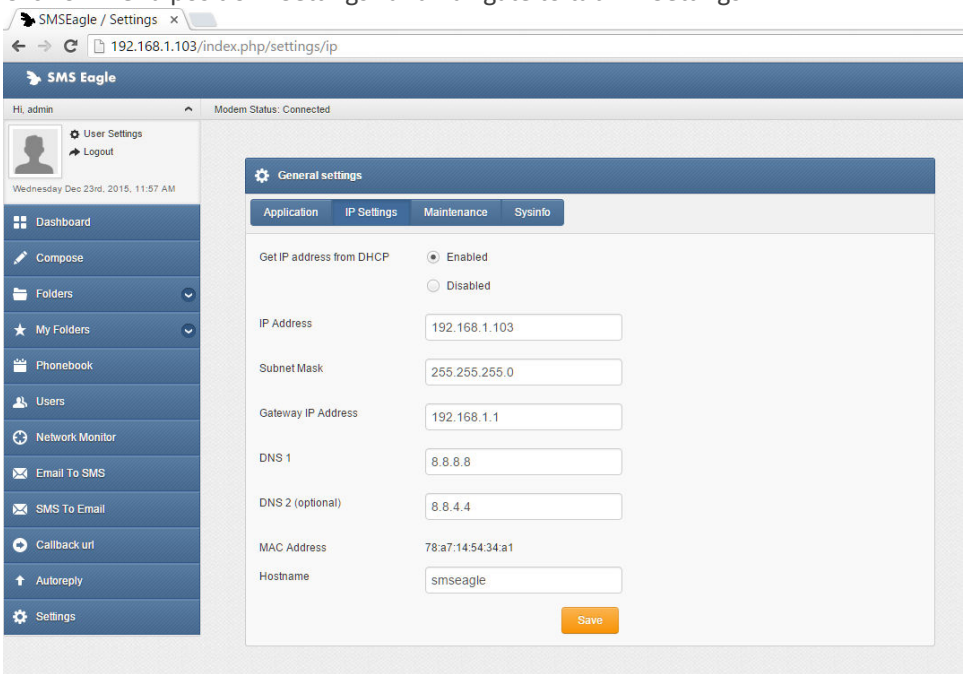

Disable DHCP server. Enter your IP settings.

Press “Save” button.

E) SETTING SIM-CARD PIN NUMBER

This step should ONLY be done if your SIM-card(s) requires PIN.

If your SIM-card(s) requires PIN number at startup, go to Settings > Maintenance Tab. Enter your PIN number in the field “SIM Card PIN 1/2”:

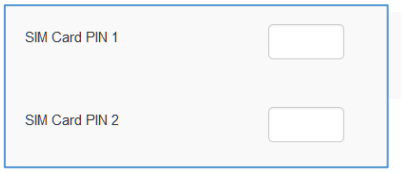

Press “Save” button.

F) REBOOT THE DEVICE

Go to Settings > Maintenance Tab. Press **Reboot** button.

2. USING SMSEAGLE

Get to know with Connectors, Ports and LEDs

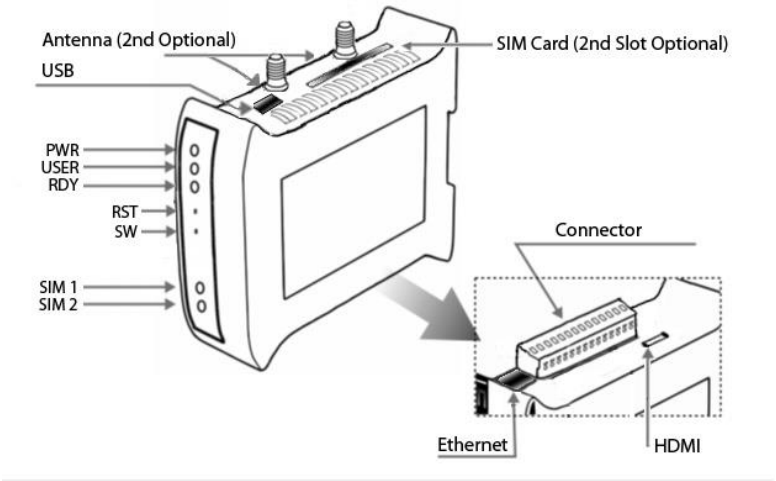

Element	Label	Description
Connector 1	C1	Power connector and serial ports
SIM Card Slot	SIM1, SIM2 (optional)	SIM card slot(s)
HDMI port	HDMI	HDMI port (cable not included)
USB port	USB	USB port (cable not included)
Ethernet Port	ETH	Ethernet RJ45 socket
Antenna	ANT	Antenna socket
Power LED	PWR	LED indicating power-on
User LED	USER	LED for user application purpose (not used)
SIM1,2 LEDs	3G modem 1, 3G modem 2 (optional)	LED indicator for modem status
Ready LED	RDY	LED indication device status
Reset	RST	Switch for rebooting the device
User Switch	SW	Switch for restoring to factory settings

Basic Operations

SMSEagle is capable to work in various screen resolutions, making it accessible for wide range of devices: computers, laptops, tablets, smartphones, etc.

Open a web browser on your device, type in SMSEagle's IP address (as set in previous chapter). At login screen type in your username/password. Default username and password is given in chapter First Start.

SMSEagle features

- Sending & Receiving SMS (managing messages with Inbox, Outbox, Sent Items)
- Smartphone-like conversation mode (messages are nicely grouped by phone number). You can easily track history of what you send and receive
- Sending to single numbers, contacts or groups from phonebook
- SMS Scheduling by specified date and time or delay
- Message templates (save & edit your own templates)
- Phonebook (single contacts, private and public groups of contacts)
- Multiuser support (each user has access to a private Inbox, Outbox, Sent Items)
- Unicode support (support of national characters)
- 3G modem watchdog installed
- Failover support (HA cluster of 2 devices)
- Modem failover mechanism (for built-in modems)

- Device failover support (HA cluster of 2 devices)

SMSEagle plugins

Basic features of SMSEagle software are extended by plugins that provide extra features to the software. Below you will find a description of plugins available in each SMSEagle device. All plugins are an integral part of SMSEagle software. That means that all described plugins are installed in a standard software of SMSEagle device and are available for free.

Autoreply plugin

If the plugin is set to 'Active' SMSEagle responds to each received message with automatic fixed text response. Text response can be defined within plugin settings. If within last 10 minutes text response has been already sent to a given phone number, text response is not being sent again to that number.

PLUGIN CONFIGURATION

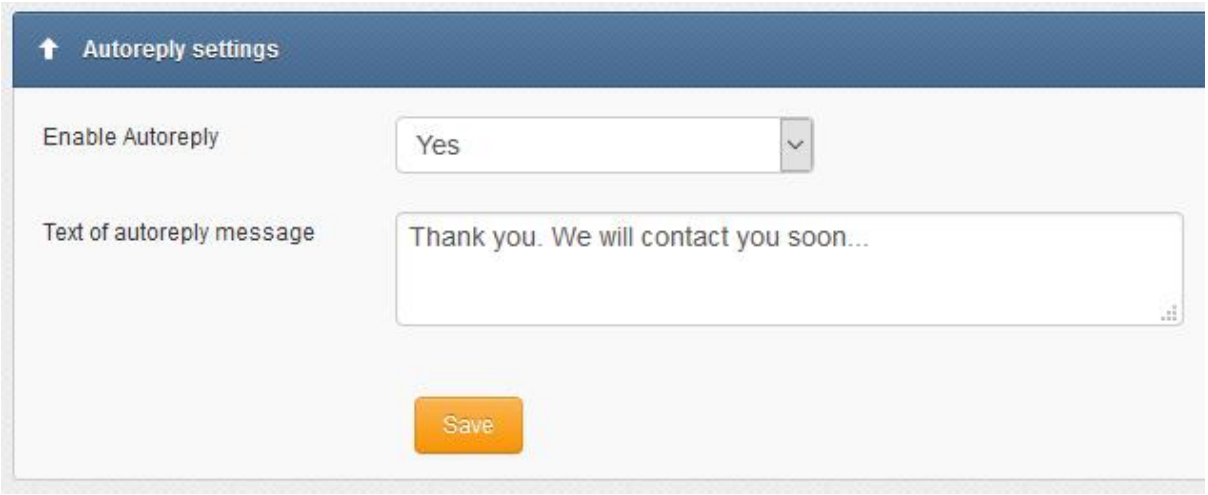

Screenshot from autoreply settings

Network Monitoring plugin

SMSEagle is equipped with powerful (yet simple to use) network services monitoring features. With that features you can monitor any service that has listening port open. SMSEagle is trying to connect to each defined port in Network Monitoring feature and sends defined SMS alert when port is unavailable. Below you will find a brief overview of plugin capabilities.

Control status of all your defined tasks

Network Monitor

No.	Task Name	Host	Test Type	Sc
1	Lotus Notes	10.20.154.23	ICMP (ping)	Dis bet 23: 05:
2	Remote www service	www.smseagle.eu	Port: 80	Dis bet 23: 05:
3	SMTP Mail Server	10.20.154.231	Port: 25	Alv
4	Sharepoint	10.20.154.29	ICMP (ping)	Alv

- see a settings' overview for all of your tasks
- check which server/service is currently unavailable
- see when a specific server/service was last down (last downtime)
- check what happened at last downtime (see server/service response)
- edit/delete your tasks
- disable tasks when needed (e.g. when doing a machine upgrades)

Define what you want to monitor in each task

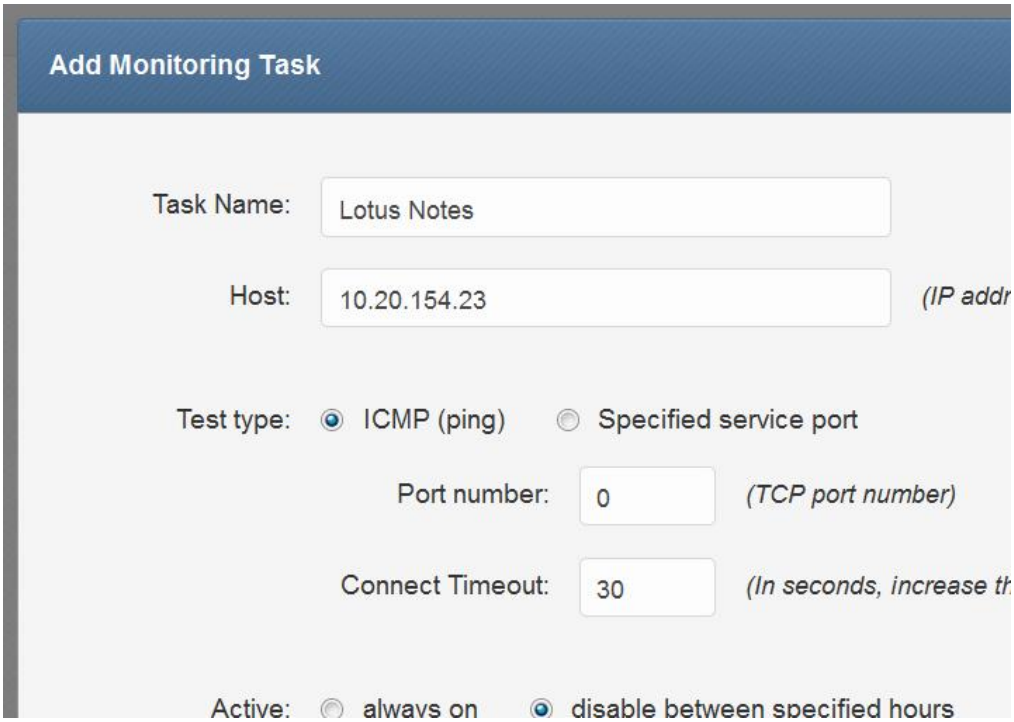

- choose a name for the task
- enter a host (IP address or Hostname)
- choose ICMP (ping) to monitor a server with ICMP protocol
- …or PORT to monitor your service on a selected port (SMSEagle will check if port is open)
- increase a default timeout value for busy servers (by default we set it to 30 seconds)

Define a schedule

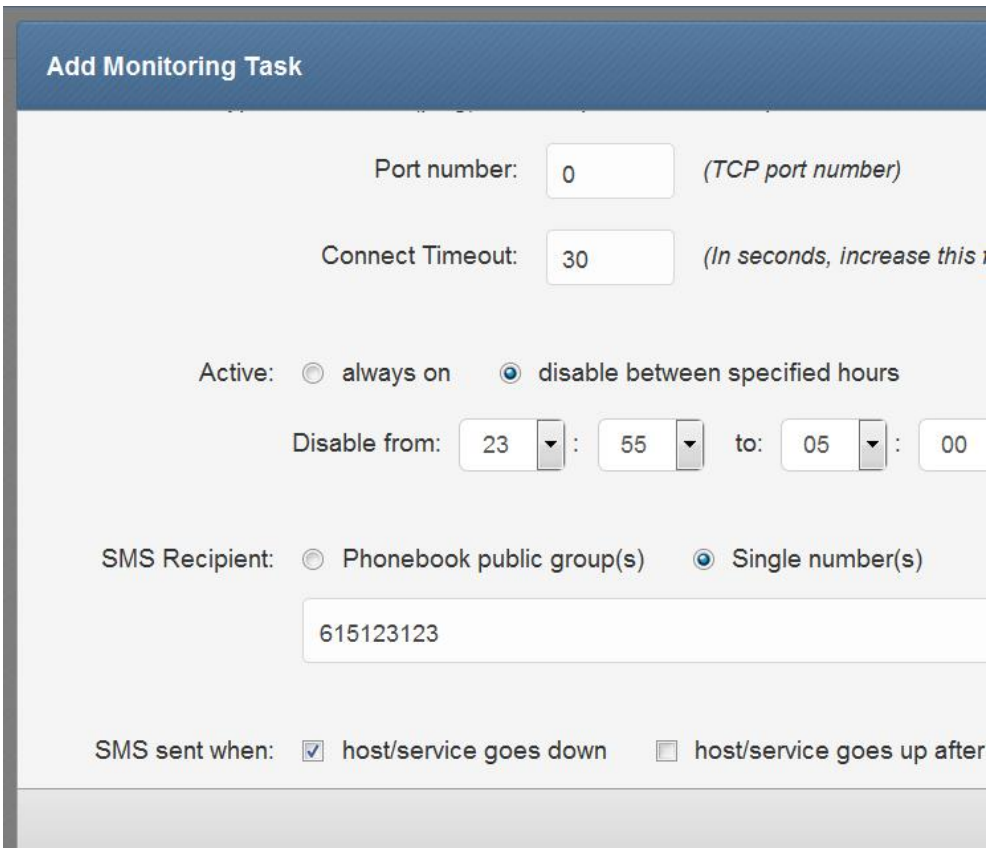

- choose if task should be always enabled…
- …or disable it in chosen times
  (during a night, when a machine goes through planned restarts, during resource intensive backups, etc.)
- enter a phone number or choose a group of users to send your SMS alert to
- select when to send SMS alert (when host/service goes down, when host/service goes up after failure)

Define a SMS alert message

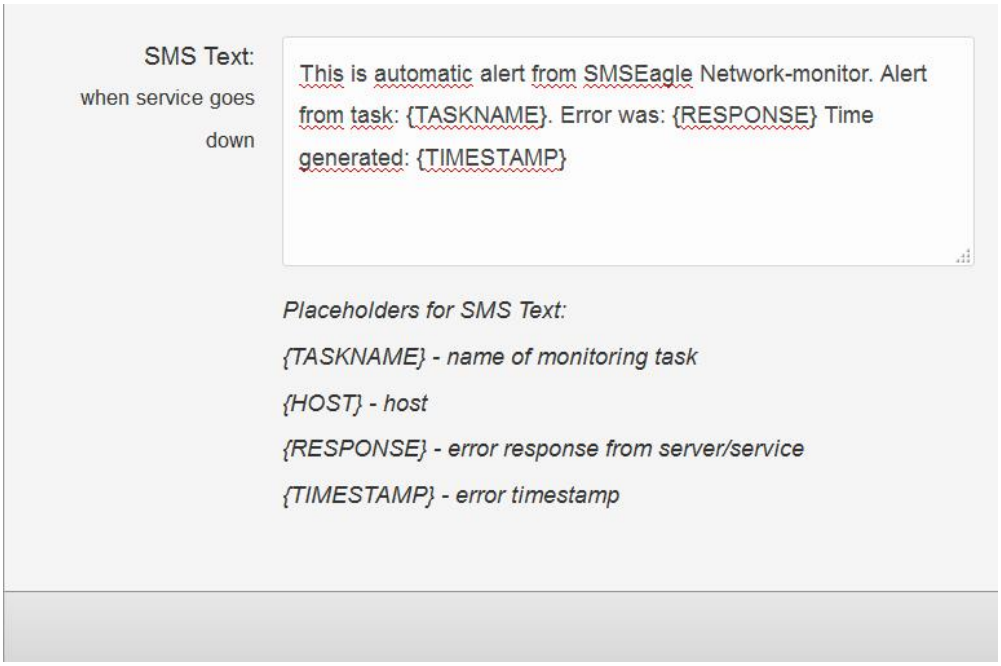

Define your SMS messages when host or service becomes unavailable/comes back to life. Choose field placeholders for your SMS text:

- {TASKNAME} – puts a taskname inside SMS text
- {HOST} – hostname or IP address
- {RESPONSE} – message received (in case of no response from server/service)
- {TIMESTAMP} – timestamp of an error

Receive SMS alerts

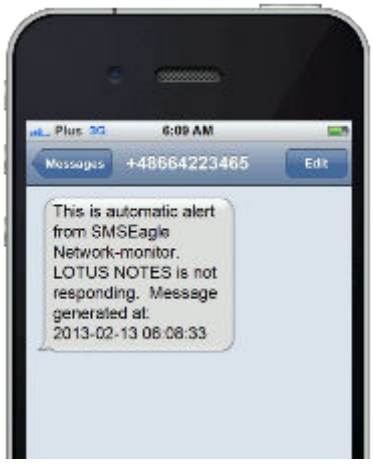

- be immediately alerted when your services/servers go down (or go up after failure)
- give yourself a chance to react quickly

Go to our website www.smseagle.eu for more details of this plugin.

Email to SMS plugin

Email To SMS plugin allows you to convert an email to SMS message.

BASIC USAGE

If the plugin is enabled, email sent to the email address:
PHONE_NUMBER@[IP_ADDRESS_OF_SMSEAGLE] will be converted to SMS message.

PHONE_NUMBER is a destination phone number
IP_ADDRESS_OF_SMSEAGLE is the IP address of your device.
The text of the email is the text of the SMS message (optionally you can append email subject at the beginning of SMS message).

Example: email message sent to the address: 123456789@[192.168.0.101] will be converted to SMS message and delivered to phone number 123456789.

SEND TO USERNAME/GROUP

Email sent to the email address:
NAME_IN_PHONEBOOK@[IP_ADDRESS_OF_SMSEAGLE] will be converted to SMS message and will be sent to a user or users group from SMSEagle's phonebook.

NAME_IN_PHONEBOOK is a username or group name (must be a public group) from SMSEagle's phonebook
IP_ADDRESS_OF_SMSEAGLE is the IP address of your device.
The text of the email is the text of the SMS message (optionally you can append email subject at the beginning of SMS message).

Example: email message sent to the address: db-admins@[192.168.0.101] will be converted to SMS message and delivered to all members of db-admin group. The db-admin group must be defined in your SMSEagle phonebook.

USING FQDN IN EMAIL ADDRESS

It is also possible to use Fully Qualified Domain Name in an email address sent to SMSEagle box (eg.: 123456789@mydomain.com). Please refer to our FAQ article: How do I configure Email2SMS plugin to accept FQDN email addresses for more details.

PLUGIN CONFIGURATION

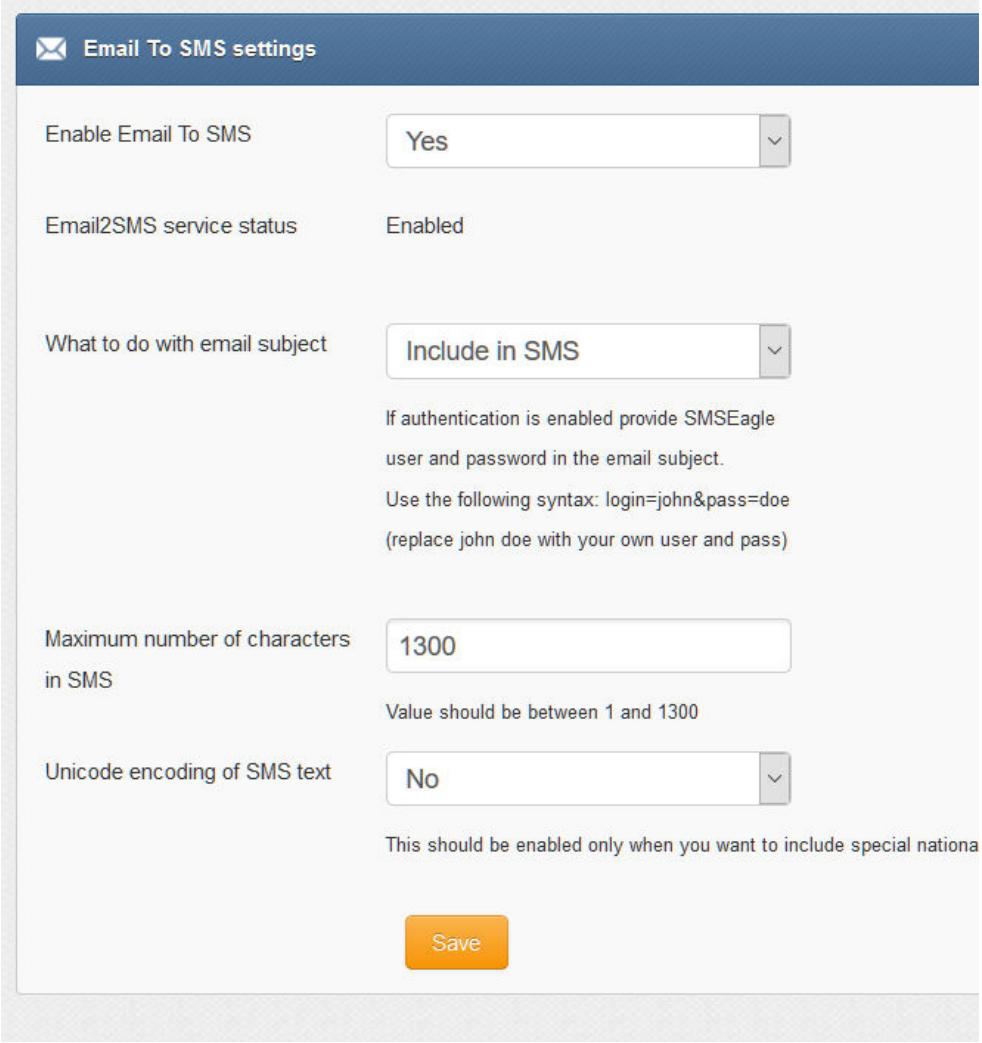

Screenshot from Email to SMS settings

- if you want to use the plugin, set 'Email2sms active' to 'Yes'
- if you want to include a subject of an email in SMS message, set 'What to do with email subject' setting to 'Include in SMS'. The email subject will be appended at the beginning of SMS message
- if you want to use user authentication, set 'What to do with email subject' setting to 'Use for authentication'. If user authentication is enabled, provide in a subject of an email your login and password in the following form: login=john&pass=doe
- the text of an email will be cropped to the value 'Maximum number of characters'. Maximum allowed length of SMS message is 1300 characters
- if you want to include in SMS message special national characters (like ąäàöß 我) set "Unicode encoding of SMS text" to 'Yes'

SMS to Email plugin

SMS to Email plugin allows you to forward your SMS messages to email address.

The plugin can be used in two modes:

a. forwarding of incoming SMS to email of last sender (so called **Two-way Email2SMS & SMS2Email**) In this mode, when SMSEagle receives incoming SMS, it checks if earlier anyone was sending SMS to the number from incoming SMS using Emai2SMS. If last sender is found, the incoming SMS is

forwarded to the email address of last sender. If no last sender is found, then the incoming message is forwarded to a default email address given in plugin settings.

b. It forwards all the incoming messages to one fixed email address.
In this mode all incoming SMS messages are forwarded to always the same email address.

Plugin uses an external SMTP server for sending emails.

PLUGIN CONFIGURATION

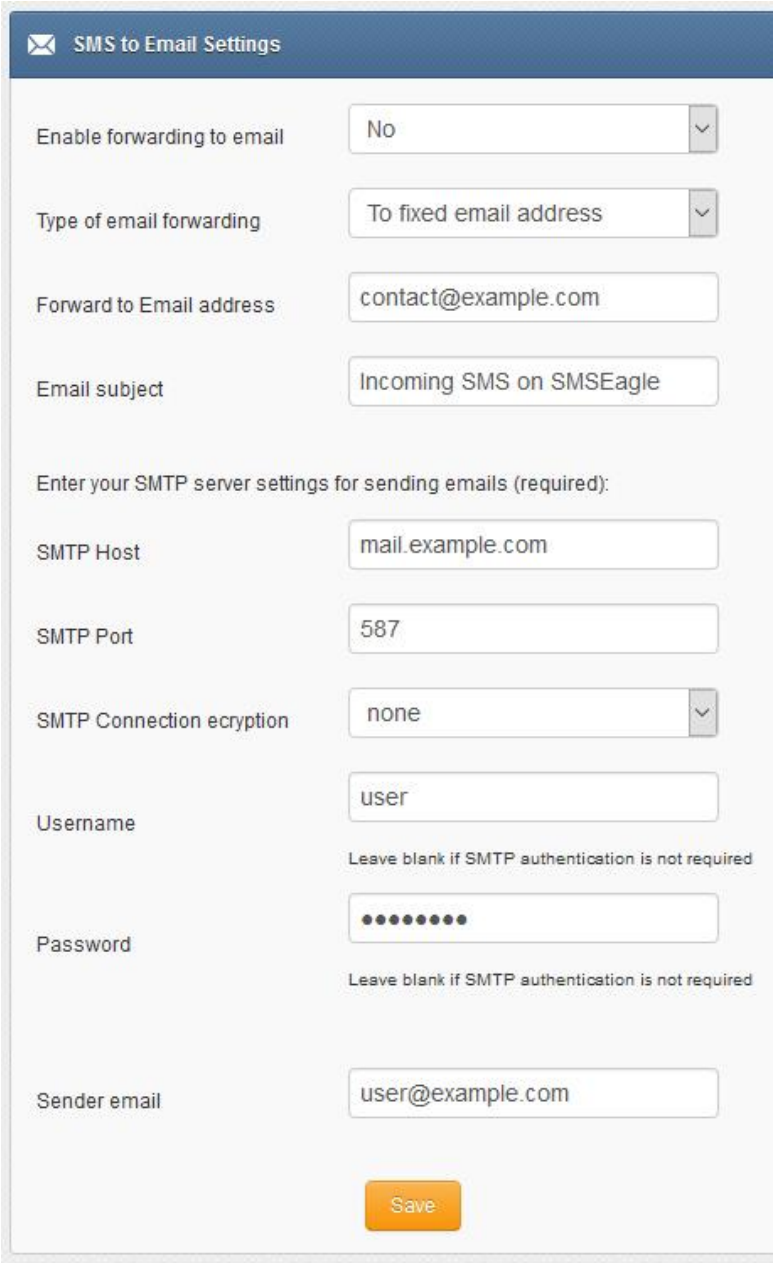

Screenshot from SMS to Email settings

- if you want to use the plugin, set 'Enable forwarding to email' to 'Yes'
- choose a type of email forwarding: "To email of last sending user" (so called "Two-way Email2SMS & SMS&Email") or "To fixed email address"
- enter an email address to which incoming SMS messages are to sent
- enter SMTP configuration for your SMTP server that will be used for sending emails

Callback URL plugin

Callback URL plugin allows you to forward incoming SMS message to a defined URL address. If the plugin is enabled, on each incoming SMS message SMSEagle will trigger HTTP request to a defined URL. HTTP request can be of type GET or POST.

PLUGIN CONFIGURATION

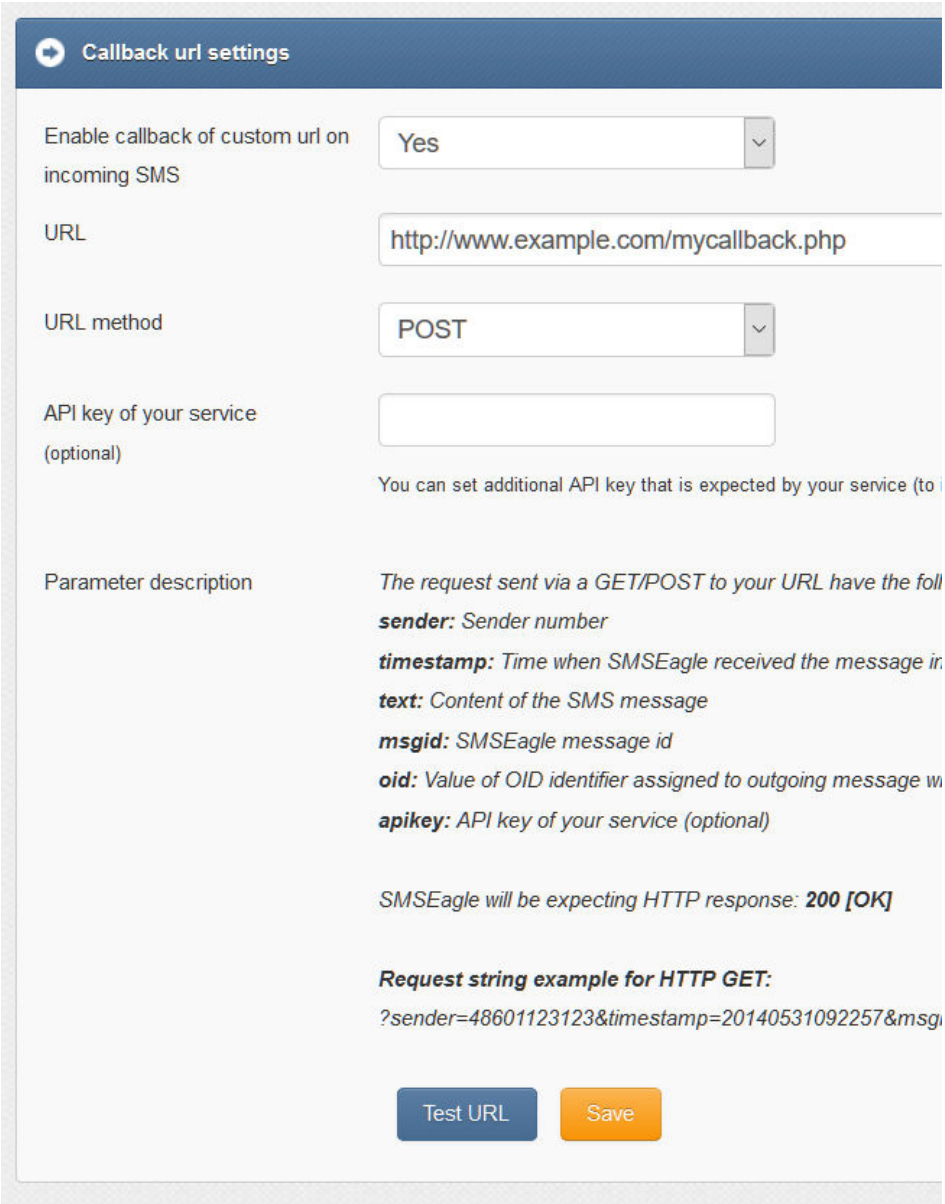

Screenshot from Callback URL settings

- If you want to use the plugin, set 'Enable callback' to 'Yes'
- 'URL' field defines remote address of your callback script
- With 'URL method' you can choose whether callback to your URL will be done with HTTP GET or POST method
- Optionally you can define API key value. This will be passed to your callback URL in parameter 'apikey'. If you leave the field blank, 'apikey' parameter will not be passed to your callback URL
- 'Test URL' button allows to test whether your Callback URL configuration is correct. SMSEagle will make a callback request with test parameters and will verify the response of remote server

SMS Forward

The plugin “SMS forward” allows to forward incoming SMS messages to one/may recipients according to defined rules.

PLUGIN CONFIGURATION

Plugin “SMS Forward” allows to add many forwarding rules. Each rule can be enabled or disabled by user.

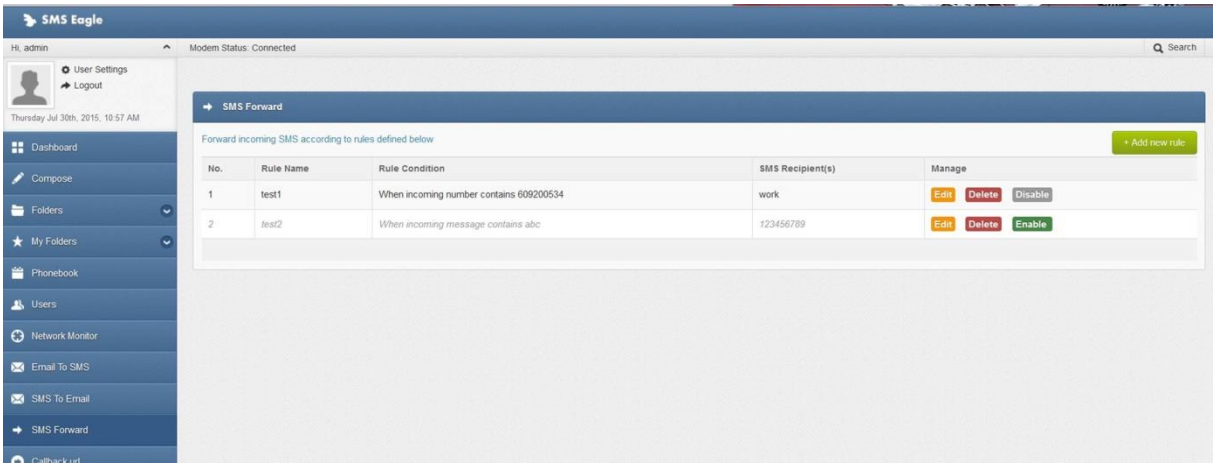

Screenshot from plugin window

For each rule user can define:

- When incoming SMS should be forwarded (Rule type) and to what number(s) the message should be forwarded (SMS Recipient).
- When defining a rule user can choose SMS recipient (who gets the forwarded SMS).
- It can be either phone number or name of group from phonebook.
- User may define many forwarding rules in the plugin.
- Each rule is processed independently.
- There is a possibility to enable/disable each rule.

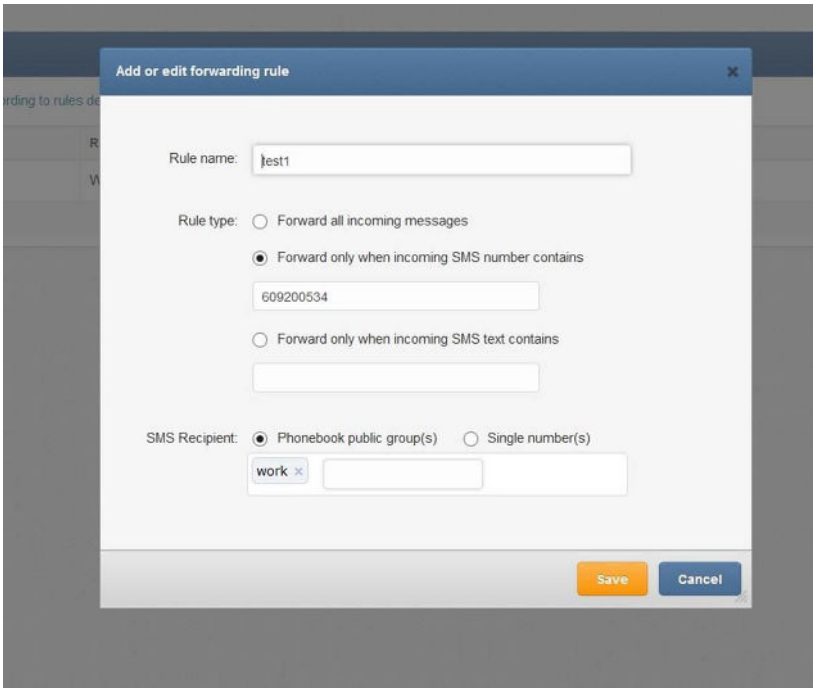

Screenshot form "Add/edit forwarding rule"

Periodic SMS

The plugin "Periodic SMS" allows to send SMS messages at a desired time interval. User may define many sending rules, and each rule will be processed independently.

PLUGIN CONFIGURATION

Plugin "Periodic SMS" allows to add many sending rules. Each rule can be enabled or disabled by user.

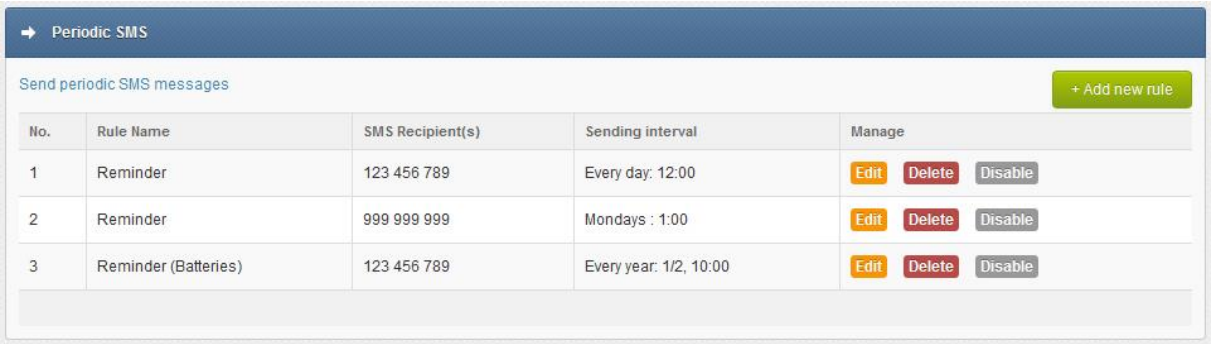

Screenshot from plugin window

For each rule the user can define:

- The rule name
- Sending interval (Hourly, Daily, Weekly, Monthly or Annually)
- The content of the SMS text
- The recipients, sending SMS to a single number or a group from phonebook

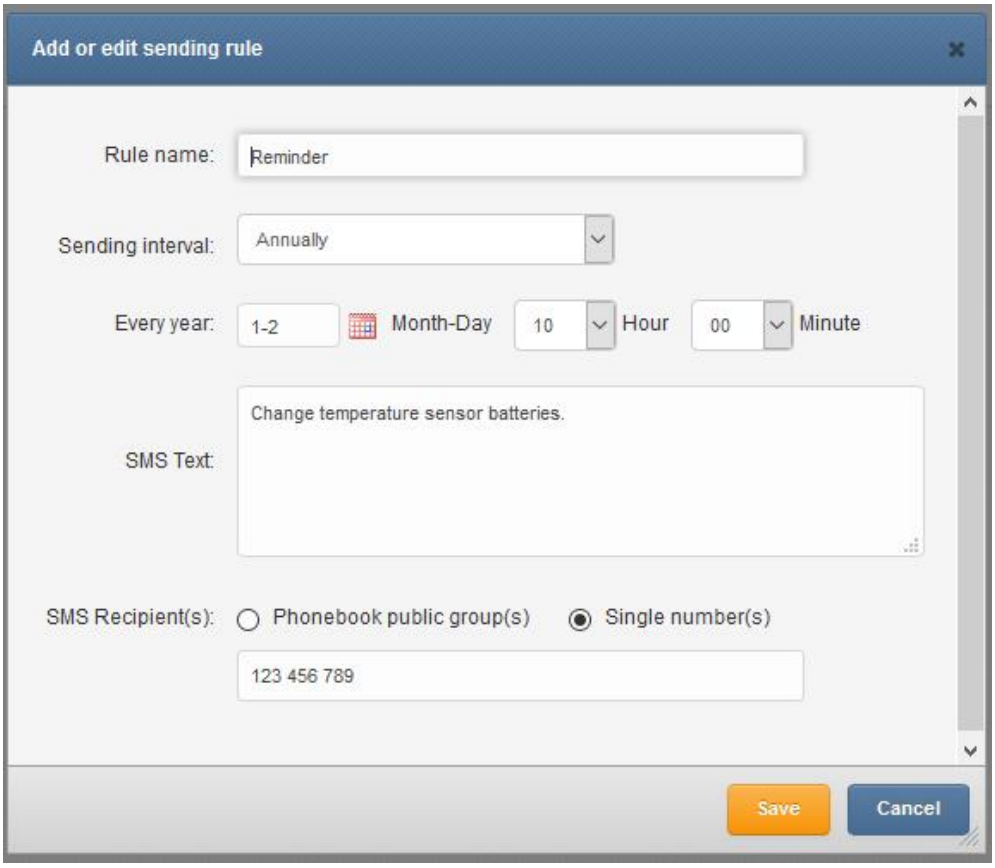

Screenshot from "Add new rule" window

Digital input/output (DI/DO)

The NXS-family of SMSEagle devices is equipped with 2 digital inputs (DI) and 2 digital outputs (DO). The digital inputs can be used to receive signals from outside sensors or devices and automatically trigger sending of SMS message based on input state. On the other hand the digital outputs may be used to activate external devices connected to the outputs when certain SMS messages are received by SMSEagle.

The logical states of inputs and outputs of SMSEagle NXS-family of devices are represented by the following voltages:

Logical level	Voltage
LOW (0)	0 V
HIGH (1)	+5V

PLUGIN CONFIGURATION

The plugin "Digital input/output" allows you to define rules that control the behaviour of digital inputs/outputs on SMSEagle device. User may define several processing rules for both inputs and outputs.

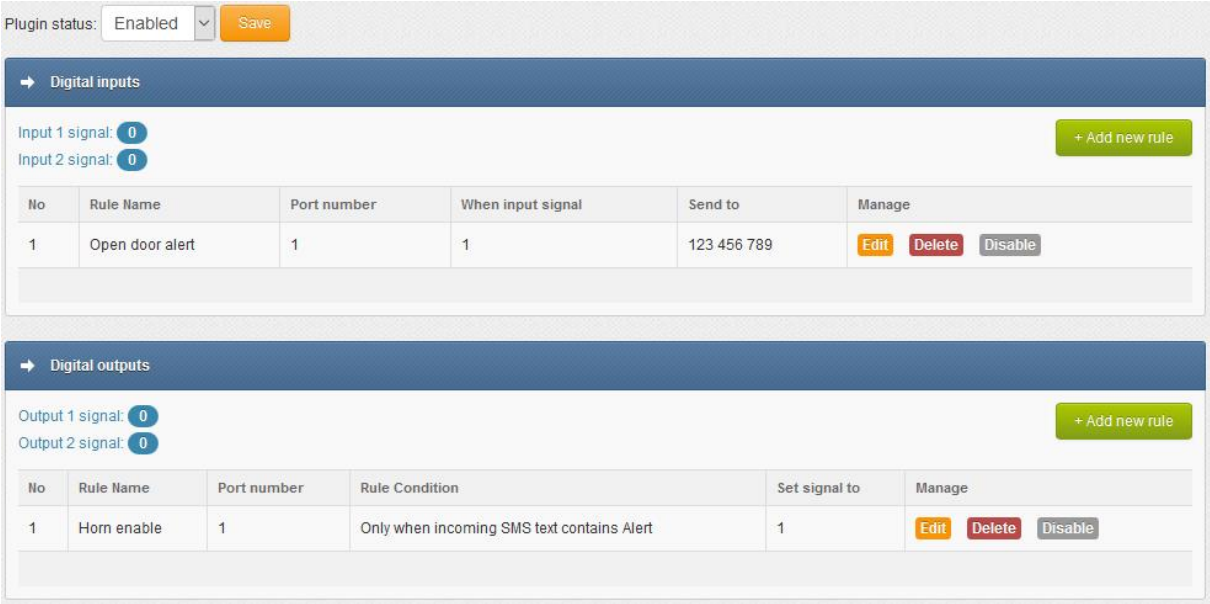

Screenshot from plugin window

DIGITAL INPUTS

For each processing rule for digital input user can define:

- The rule name
- Port number (1,2)
- State of input signal that will trigger sending of SMS message (field “When input signal”)
- SMS text (field “Send SMS message”)
- The recipients phone number(s) separated with comma or group(s) from phonebook (field “Send to”)

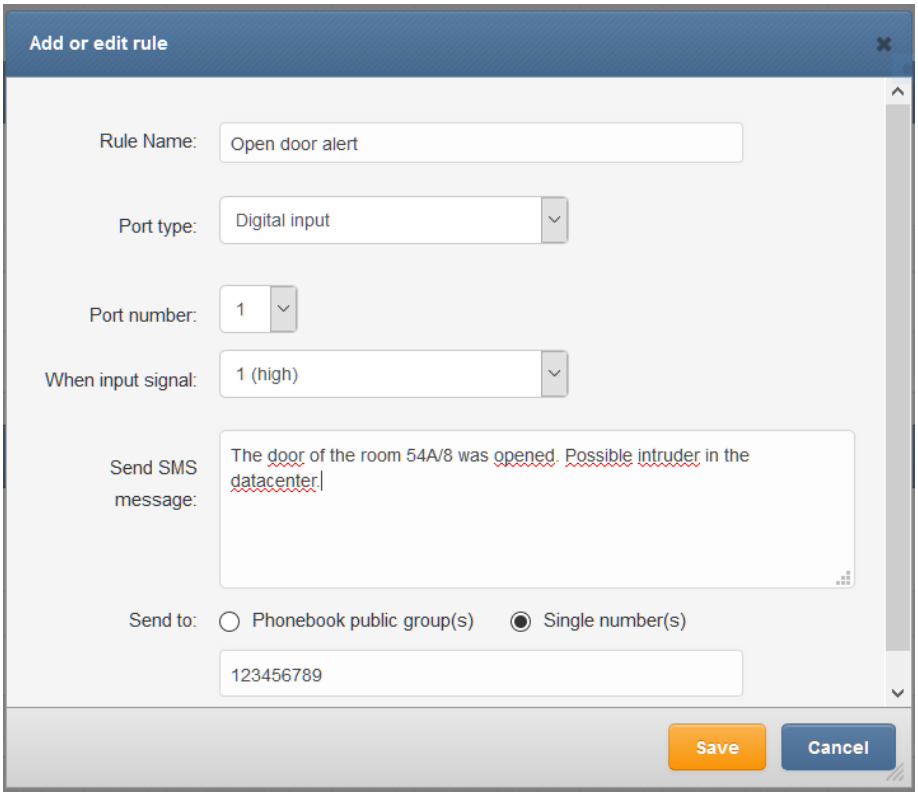

Screenshot from digital input "Add or edit rule" window

DIGITAL OUTPUTS

For each processing rule for digital output user can define:

- The rule name
- Port number (1,2)
- On what condition digital output should be set (all incoming messages, when incoming SMS number contains or when incoming SMS text contains given value)
- State of output signal that will be triggered by incoming SMS message

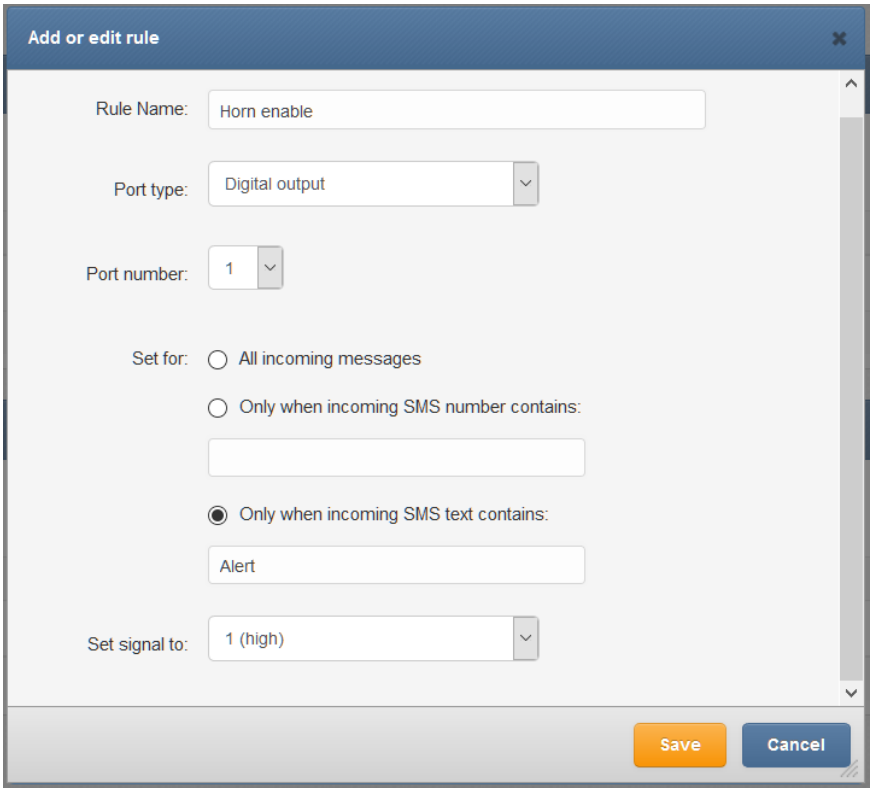

Screenshot from digital output "Add or edit rule" window

***WARNING**: There is no over-voltage protection on the board. Randomly plugging wires and power sources into your digital inputs may kill it. Digital outputs has a current efficiency of 200mA. Consider using a relay for high power output devices.*

Multimodem features

SMSeagle NXS-9750 is equipped with two built-in modems. You can manage modem settings in web-gui menu Settings > Maintenance Tab. There are following options available for multimodem device:

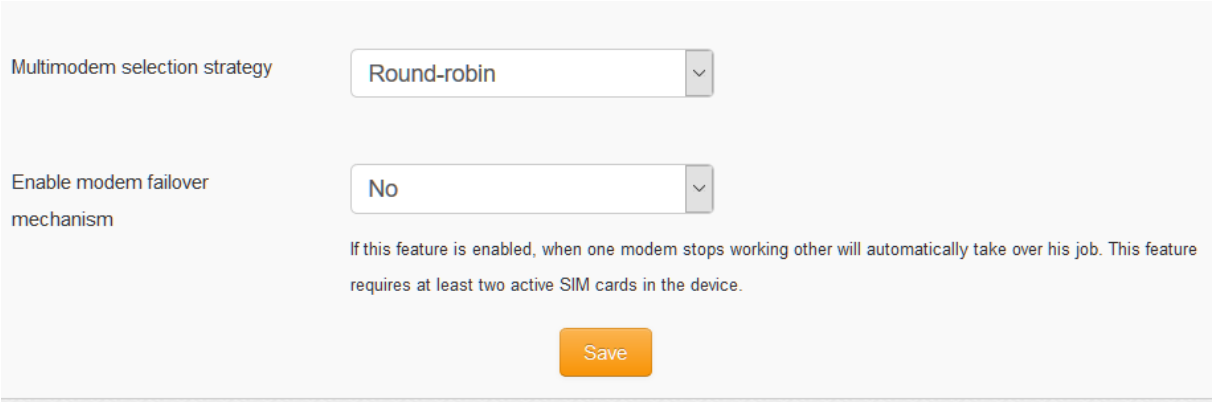

Multimodem selection strategy

This setting is responsible for modem choice strategy when sending SMS messages from SMSEagle. The following options are possible:

- Round-robin
  In this strategy modems are selected sequentially one-by-one when sending out SMS messages. This means that device sends messages using modem1 > modem2 > modem1 > modem2, etc.
- SIM1 as Master modem
  In this strategy modem1 is always selected when sending out SMS messages. If failover is enabled (see below) modem2 will be always used as a backup in failover strategy
- SIM2 as Master modem
  In this strategy modem1 is always selected when sending out SMS messages. If failover is enabled (see below) modem2 will be always used as a backup in failover strategy

Enable modem failover mechanism

If this setting is enabled, when one modem stops working other will automatically take over his job. This feature requires at least two active SIM cards in the device. The health check for each modem is performed with 5 minutes frequency. If during a health check a modem is not connected to network the other will automatically take over his jobs (including messages waiting in Outbox folder).

SMSEagle API

SMSEagle has powerful built-in HTTP API functionalities. REST API is dedicated for integration of SMSEagle with any external system or application. Below you will find a detailed description of API functionalities.

Please note, that SMSEagle API supports both HTTP and HTTPS protocol.

For your convenience sample usage of SMSEagle's API in most popular programming languages are available at: http://www.smseagle.eu/code-samples/

1. Send SMS: HTTP GET method

HTTP GET METHOD:

```
https://url-of-smseagle/index.php/http_api/send_sms
```

PARAMETERS:

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
to	recipient telephone number (or numbers separated with comma)
message	your SMS message
date	*(optional parameter)* date and time in format YYYYmmDDHHMM (YYYY – year, mm – month, DD – day, HH – hour, MM – minute). If this parameter is not null SMS will be scheduled for sending at the given date and time
highpriority	*(optional parameter)* 0 = normal priority, 1 = SMS will have higher priority in Outbox queue when processed by GSM-modem
unicode	*(optional parameter)* 0 = no Unicode encoding (default), 1 = SMS will be encoded using Unicode (you can send national characters)
flash	*(optional parameter)* 0 = normal SMS (default), 1 = SMS will be sent as flash message
oid	*(optional parameter)* This attribute specifies a user-defined unique ID that is assigned to a message-recipient pair. The oid is a varchar(36) that uniquely identifies a message sent to a particular recipient (particular phone number). The value of this ID allows client applications to match incoming reply messages to outgoing messages. If no oid was assigned to the outgoing message this attribute will have a value of null for incoming message
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/send_sms?
login=john&pass=doe&to=1234567&message=mymessage

https://url-of-smseagle/index.php/http_api/send_sms?
login=john&pass=doe&to=1234567&message=mymessage&date=201401152132
```

```
https://url-of-smseagle/index.php/http_api/send_sms?
login=john&pass=doe&to=1234567&message=mymessage&highpriority=1
```

RESPONSE:

Response: **OK; ID=[ID of message in outbox]**
Sample response: OK; ID=297

Response (when wrong logindata): **Invalid login or password**
Response (when wrong parameters): **Wrong parameters**

RESPONSE (XML):

Response:
<xml>
  <message_id>**[ID of message in outbox]**</message_id>
  <status>ok</status>
</xml>

Sample response:
<xml>
  <message_id>297</message_id>
  <status>ok</status>
</xml>

Response (when wrong logindata):
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>

Response (when wrong parameters):
<xml>
  <error_text>Wrong parameters</error_text>
  <status>error</status>
</xml>

Important notice: You must encode URL before sending it to gateway if you use national characters in SMS message text.

2. Send SMS: JSONRPC method

HTTP POST METHOD:
`https://url-of-smseagle/index.php/jsonrpc/sms`

PARAMETERS:

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
to	recipient telephone number (or numbers separated with comma)

message	your SMS message
date	*(optional parameter)* date and time in format YYYYmmDDHHMM (YYYY – year, mm – month, DD – day, HH – hour, MM – minute). If this parameter is not null SMS will be scheduled for sending at the given date and time
highpriority	(optional parameter) 0 = normal priority, 1 = SMS will have higher priority in Outbox queue when processed by GSM-modem
unicode	(optional parameter) 0 = no Unicode encoding (default), 1 = SMS will be encoded using Unicode (you can send national characters)
flash	(optional parameter) 0 = normal SMS (default), 1 = SMS will be sent as flash message
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

SAMPLE BODY:

```
{"method":"sms.send_sms",
"params":{"login":"john","pass":"doe","to":"481234567”,"message":"My
message"}}
or
{"method":"sms.send_sms",
"params":{"login":"john","pass":"doe","to":"481234567”,"message":"My
message","date":"201401152132”}}
or
{"method":"sms.send_sms",
"params":{"login":"john","pass":"doe","to":"481234567”,"message":"My
message","highpriority":"1”}}
```

RESPONSE:

Response: `{"result": "OK; ID=[ID of message in outbox]"}`
Sample response: `{"result": "OK; ID=297"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`
Response (when wrong parameters): `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Response:
`{"result": {"message_id":"[ID of message in outbox]","status":"ok"}}`

Sample response: `{"result": {"message_id":"748","status":"ok"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

Response (when wrong parameters):
`{"result": {"error_text":"Wrong parameters","status":"error"}}`

3. Send SMS to a group: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/send_togroup`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
groupname	group name defined in your SMSEagle Phonebook. The group must be defined as Public
message	your SMS message
date	*(optional parameter)* date and time in format YYYYmmDDHHMM (YYYY – year, mm – month, DD – day, HH – hour, MM – minute). If this parameter is not null SMS will be scheduled for sending at the given date and time
highpriority	*(optional parameter)* 0 = normal priority, 1 = SMS will have higher priority in Outbox queue when processed by GSM-modem
unicode	*(optional parameter)* 0 = no Unicode encoding (default), 1 = SMS will be encoded using Unicode (you can send national characters)
flash	*(optional parameter)* 0 = normal SMS (default), 1 = SMS will be sent as flash message
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/send_togroup?
login=john&pass=doe&groupname=admins&message=mymessage
```

```
https://url-of-smseagle/index.php/http_api/send_togroup?
login=john&pass=doe&groupname=admins&message=mymessage&date=20140115213
2
```

```
https://url-of-smseagle/index.php/http_api/send_togroup?
login=john&pass=doe&groupname=admins&message=mymessage&highpriority=1
```

RESPONSE (XML):

Response:

```
<xml>
   <message_id>[ID of message in outbox]</message_id>
   <status>ok</status>
</xml>
```

Sample response:

```
<xml>
   <message_id>297</message_id>
   <status>ok</status>
</xml>
```

Response (when wrong logindata):

```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```

Response (when wrong parameters):

```
<xml>
   <error_text>Wrong parameters</error_text>
   <status>error</status>
</xml>
```

4. Send SMS to a group: JSONRPC method

HTTP POST METHOD:
`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
groupname	group name defined in your SMSEagle Phonebook. The group must be defined as Public
message	your SMS message
date	*(optional parameter)* date and time in format YYYYmmDDHHMM (YYYY – year, mm – month, DD – day, HH – hour, MM – minute). If this parameter is not null SMS will be scheduled for sending at the given date and time
highpriority	*(optional parameter)* 0 = normal priority, 1 = SMS will have higher priority in Outbox queue when processed by GSM-modem
unicode	*(optional parameter)* 0 = no Unicode encoding (default), 1 = SMS will be encoded using Unicode (you can send national characters)
flash	*(optional parameter)* 0 = normal SMS (default), 1 = SMS will be sent as flash message
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"sms.send_togroup",
"params":{"login":"john","pass":"doe","groupname":"admins","message":"m
ymessage"}}
or
{"method":"sms.send_togroup",
"params":{"login":"john","pass":"doe","groupname":"admins","message":"m
ymessage","date":"201401152132"}}
or
{"method":"sms.send_togroup",
"params":{"login":"john","pass":"doe","groupname":"admins","message":"m
ymessage","highpriority":"1"}}
```

RESPONSE:

Response: `{"result": "OK; ID=[ID of message in outbox]"}`

Sample response: `{"result": "OK; ID=[297]"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters): `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Response:

```
{"result": {"message_id":"[ID of message in outbox]","status":"ok"}}
```

Sample response: `{"result": {"message_id":"748","status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong parameters","status":"error"}}
```

5. Send binary SMS: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/send_binary_sms`

PARAMETERS:

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
to	recipient telephone number (or numbers separated with comma)
udh	UDH header for the message (in hex format)
data	binary message (in hex format)
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/send_binary_sms?
login=john&pass=doe&to=1234567&udh=0605040B8423F0&data=EA0601AE02056A00
45C60C037777772E736D736561676C652E657500080103534D534561676C65000101
```

RESPONSE:

Response: **OK; ID=[ID of message in outbox]**

Sample response: OK; ID=297

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters): **Wrong or missing >>udh<< parameter**

Response (when wrong parameters): **Wrong or missing >>data<< parameter**

RESPONSE (XML):

Response:

```
<xml>
   <message_id>[ID of message in outbox]</message_id>
   <status>ok</status>
</xml>
```

Sample response:
<xml>
<message_id>297</message_id>
<status>ok</status>
</xml>

Response (when wrong logindata):
<xml>
<error_text>Invalid login or password</error_text>
<status>error</status>
</xml>

Response (when wrong parameters):
<xml>
<error_text> Wrong or missing >>udh<< parameter </error_text>
<status>error</status>
</xml>

Response (when wrong parameters):
<xml>
<error_text> Wrong or missing >>data<< parameter </error_text>
<status>error</status>
</xml>

6. Send binary SMS: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

PARAMETERS:

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
to	recipient telephone number (or numbers separated with comma)
udh	UDH header for the message (in hex format)
data	binary message (in hex format)
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"sms.send_binary_sms",
"params":{"login":"john","pass":"doe","to":"1234567","udh":"0605040B842
3F0","data":"EA0601AE02056A0045C60C037777772E736D736561676C652E65750008
0103534D534561676C65000101"}}
```

RESPONSE:

Response: `{"result": "OK; ID=[ID of message in outbox]"}`
Sample response: `{"result": "OK; ID=297"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`
Response (when wrong parameters): `{"result": "Wrong or missing >>udh<< parameter"}`
Response (when wrong parameters): `{"result": "Wrong or missing >>data<< parameter"}`

RESPONSE (EXTENDED):

Response:
`{"result": {"message_id":"[ID of message in outbox]","status":"ok"}}`

Sample response: `{"result": {"message_id":"748","status":"ok"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

Response (when wrong parameters):
`{"result": {"error_text":" Wrong or missing >>udh<< parameter ","status":"error"}}`

Response (when wrong parameters):
`{"result": {"error_text":"Wrong or missing >>data<< parameter", "status":"error"}}`

7. READ SMS: HTTP GET METHOD

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/read_sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
folder	one of the following: inbox, outbox, sentitems
idfrom	(optional) minimal message-id
from	(optional) telephone number of SMS sender (for inbox)
to	(optional) telephone number of SMS receiver (for sentitems)
datefrom	(optional) date and time in format YYYYmmDDHHMMSS (YYYY – year, mm – month, DD – day, HH – hour, MM – minutes, SS – seconds). Show only messages sent/received on this date/time and later
dateto	(optional) date and time in format YYYYmmDDHHMMSS (YYYY – year, mm – month, DD – day, HH – hour, MM – minutes, SS – seconds). Show only messages sent/received on this date/time and earlier
limit	(optional) how many messages to show
unread	(optional) 1 = show only unread messages
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

`Show all messages from inbox:`

```
https://url-of-smseagle/index.php/http_api/read_sms?
login=john&pass=doe&folder=inbox

Show all unread messages from inbox:
https://url-of-smseagle/index.php/http_api/read_sms?
login=john&pass=doe&folder=inbox&unread=1

Show messages from sentitems folder with id=1234 and higher. Limit
number of messages to 5:
https://url-of-smseagle/index.php/http_api/read_sms?
login=john&pass=doe&folder=sentitems&idfrom=1234&limit=5

Show messages from inbox folder with sender phone number +481234567:
https://url-of-smseagle/index.php/http_api/read_sms?
login=john&pass=doe&folder=inbox&from=+481234567

Show messages from sentitems folder with receiver phone number 7654321
and datetime from 2014-12-24 08:10:00 to 2014-12-31 23:59:59:
https://url-of-smseagle/index.php/http_api/read_sms?
login=john&pass=doe&folder=sentitems&to=7654321&datefrom=20141224081000
&dateto=20141231235959
```

RESPONSE:

Sample responses: inbox folder, sentitems folder

Response (when no data): **No data to display**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters): **Wrong parameters**

RESPONSE (XML):

Sample response (inbox folder):


```
<xml>
 <messages>
  <item>
   <UpdatedInDB>2016-11-17 13:23:47</UpdatedInDB>
   <ReceivingDateTime>2015-01-20 16:13:57</ReceivingDateTime>
   <Text>00540065007300740020003 2</Text>
   <SenderNumber>1234567</SenderNumber>
   <Coding>Default_No_Compression</Coding>
   <UDH/>
   <SMSCNumber>+48790998250</SMSCNumber>
   <Class>-1</Class>
   <TextDecoded>Test 2</TextDecoded>
   <ID>14</ID>
   <RecipientID/>
   <Processed>t</Processed>
   <id_folder>1</id_folder>
   <readed>true</readed>
   <last_reply/>
   <oid/>
  </item>
  <item>
   <UpdatedInDB>2016-11-17 13:36:10</UpdatedInDB>
   <ReceivingDateTime>2016-06-16 14:47:10</ReceivingDateTime>
```

```
    <Text>004F00640070002000320020</Text>
    <SenderNumber>1234</SenderNumber>
    <Coding>8bit</Coding>
    <UDH/>
    <SMSCNumber>+48790998250</SMSCNumber>
    <Class>-1</Class>
    <TextDecoded>8b123sad</TextDecoded>
    <ID>24</ID>
    <RecipientID>smseagle1</RecipientID>
    <Processed>t</Processed>
    <id_folder>1</id_folder>
    <readed>true</readed>
    <last_reply>Admin</last_reply>
    <oid/>
  </item>
 </messages>
 <status>ok</status>
</xml>
```


Response (when no data):


```
<xml>
   <error_text>No data to display</error_text>
   <status>error</status>
</xml>
```


Response (when wrong logindata):


```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```


Response (when wrong parameters):


```
<xml>
   <error_text>Wrong parameters</error_text>
   <status>error</status>
</xml>
```


8. READ SMS: JSONRPC METHOD

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
folder	one of the following: inbox, outbox, sentitems
idfrom	(optional) minimal message-id
from	(optional) telephone number of SMS sender (for inbox)
to	(optional) telephone number of SMS receiver (for sentitems)
datefrom	(optional) date and time in format YYYYmmDDHHMMSS (YYYY – year, mm –

	month, DD – day, HH – hour, MM – minutes, SS – seconds). Show only messages sent/received on this date/time and later
dateto	(optional) date and time in format YYYYmmDDHHMMSS (YYYY – year, mm – month, DD – day, HH – hour, MM – minutes, SS – seconds). Show only messages sent/received on this date/time and earlier
limit	(optional) how many messages to show
unread	(optional) 1 = show only unread messages
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
Show all messages from inbox:
{"method":"sms.read_sms",
"params":{"login":"john","pass":"doe","folder":"inbox"}}

Show all unread messages from inbox:
{"method":"sms.read_sms",
"params":{"login":"john","pass":"doe","folder":"inbox","unread":"1"}}

Show messages from sentitems folder with id=1234 and higher. Limit
number of messages to 5:
{"method":"sms.read_sms",
"params":{"login":"john","pass":"doe","folder":"sentitems","idfrom":"12
34","limit":"5"}}

Show messages from inbox folder with sender phone number +481234567:
{"method":"sms.read_sms",
"params":{"login":"john","pass":"doe","folder":"inbox","from":"
481234567"}}

Show messages from sentitems folder with receiver phone number 7654321
and datetime from 2014-12-24 08:10:00 to 2014-12-31 23:59:59:
{"method":"sms.read_sms",
"params":{"login":"john","pass":"doe","folder":"sentitems","to":"765432
1","datefrom":"20141224081000","dateto":"20141231235959"}}
```

RESPONSE:

Sample response (inbox folder):


```
{"result":[

{"UpdatedInDB":"2016-11-14 10:15:58","ReceivingDateTime":"2015-01-20
16:13:57","Text":"00540065007300740020003 2","SenderNumber":"+4812345678
9","Coding":"Default_No_Compression","UDH":"","SMSCNumber":"+4879099825
0","Class":"-1","TextDecoded":"Test
2","ID":"14","RecipientID":"","Processed":"t","id_folder":"1","readed":
"true","last_reply":null,"oid":null},

{"UpdatedInDB":"2016-11-14 10:15:58","ReceivingDateTime":"2016-06-16
14:27:10","Text":"004F0064007000200031","SenderNumber":"+48987654321","
```

Coding":"Default_No_Compression","UDH":"","SMSCNumber":"+48790998250","Class":"-1","TextDecoded":"Odp 1","ID":"23","RecipientID":"smseagle1","Processed":"t","id_folder":"1","readed":"true","last_reply":"Tester","oid":"234234"},

{"UpdatedInDB":"2016-11-14 10:15:58","ReceivingDateTime":"2016-06-16 14:47:10","Text":"004F00640070002000320020","SenderNumber":"1234","Coding":"8bit","UDH":"","SMSCNumber":"+48790998250","Class":"-1","TextDecoded":"8b123sad","ID":"24","RecipientID":"smseagle1","Processed":"t","id_folder":"1","readed":"true","last_reply":"Tester","oid":""}

]}

Response (when no data): `{"result": "No data to display"}`
Response (when wrong logindata): `{"result": "Invalid login or password"}`
Response (when wrong parameters): `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Sample response (sentitems folder):

{"result":

{"messages":[

{"UpdatedInDB":"2014-12-05 11:58:03","InsertIntoDB":"2014-12-05 10:57:38","SendingDateTime":"2016-06-16 14:27:49","DeliveryDateTime":null,"Text":"0074006500730074","DestinationNumber":"123456789","Coding":"Default_No_Compression","UDH":"","SMSCNumber":"+48602951111","Class":"1","TextDecoded":"test","ID":"61","SenderID":"smseagle1","SequencePosition":"1","Status":"SendingError","StatusError":"-1","TPMR":"-1","RelativeValidity":"255","CreatorID":"admin","id_folder":"3},

{"UpdatedInDB":"2016-06-16 14:48:56","InsertIntoDB":"2016-06-16 12:48:45","2016-06-16 14:48:56","DeliveryDateTime":null,"Text":"0074006500730074006F007500740033","Coding":"Default_No_Compression","UDH":"","SMSCNumber":"+48602951111","Class":"-1","TextDecoded":"testout3","ID":"384","SenderID":"smseagle1","SequencePosition":"1","Status":"SendingOKNoReport","StatusError":"-1","TPMR":"250","RelativeValidity":"255","CreatorID":"admin","id_folder":"3"}
],

"status":"ok"}}

Response (when no data):
{"result": {"error_text":" No data to display ", "status":"error"}}

Response (when wrong logindata):
{"result": {"error_text":"Invalid login or password","status":"error"}}

Response (when wrong parameters):
```
{"result": {"error_text":" Wrong or missing >>udh<< parameter
","status":"error"}}
```

9. Delete SMS: HTTP GET method

HTTP GET method:

```
https://url-of-smseagle/index.php/http_api/delete_sms
```

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
folder	one of the following: inbox, outbox, sentitems
idfrom	minimal id of message
idto	maximal id of message
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
Delete message with id=1234 from inbox:
https://url-of-smseagle/index.php/http_api/delete_sms?
login=john&pass=doe&folder=inbox&idfrom=1234&idto=1234

Delete messages with id 1234 - 1250 from inbox:
https://url-of-smseagle/index.php/http_api/delete_sms?
login=john&pass=doe&folder=inbox&idfrom=1234&idto=1250

Delete all messages from outbox:
https://url-of-smseagle/index.php/http_api/delete_sms?
login=john&pass=doe&folder=outbox&idfrom=1&idto=999999999
```

RESPONSE:

Response: **OK**
Response (when delete operation was not successful): **Error**
Response (when wrong logindata): **Invalid login or password**

RESPONSE (XML):

Response:
```
<xml>
  <status>ok</status>
</xml>
```

Response (when delete operation was not successful):
```
<xml>
  <status>error</status>
</xml>
```

Response (when wrong logindata):
```
<xml>
```

```
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>
```

10. Delete SMS: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
folder	one of the following: inbox, outbox, sentitems
idfrom	minimal id of message
idto	maximal id of message
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
Delete message with id=1234 from inbox:
{"method":"sms.delete_sms",
"params":{"login":"john","pass":"doe","folder":"inbox","idfrom":"1234""
idto":"1234"}}

Delete messages with id 1234 - 1250 from inbox:
{"method":"sms.delete_sms",
"params":{"login":"john","pass":"doe","folder":"inbox","idfrom":"1234",
"idto":"1250"}}

Delete all messages from outbox:
{"method":"sms.delete_sms",
"params":{"login":"john","pass":"doe","folder":"outbox","idfrom":"1","i
dto":"999999999"}}
```

RESPONSE:

Response: `{"result": "OK"}`
Response (when delete operation was not successful): `{"result": "Error"}`
Response (when wrong logindata): `{"result": "Invalid login or password"}`

RESPONSE (EXTENDED):

Response: `{"result":{"status":"ok"}}`

Response (when delete operation was not successful):
`{"result":{"status":"error"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

11. Get outgoing queue length: HTTP GET method

HTTP GET method:

`https://url-of-smseagle/index.php/http_api/get_queue_length`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

`https://url-of-smseagle/index.php/http_api/get_queue_length?login=john&pass=doe`

RESPONSE:

Response: **[number of messages in database that wait to be processed by GSM-modem]**
Sample response: 7
Response (when wrong logindata): **Invalid login or password**
Response (when wrong parameters): **Wrong parameters**

RESPONSE (XML):

Response:
```
<xml>
  <queue_length>
    [number of messages in database that wait to be processed by GSM-modem]
  </queue_length >
  <status>ok</status>
</xml>
```

Sample response:
```
<xml>
  <queue_length>7</queue_length >
  <status>ok</status>
</xml>
```

Response (when wrong logindata):
```
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>
```

Response (when wrong parameters):
```
<xml>
  <error_text>Wrong parameters</error_text>
  <status>error</status>
</xml>
```

12. Get outgoing queue length: JSONRPC method

HTTP POST METHOD CALL:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

BODY:

```
{"method":"sms.get_queue_length",
"params":{"login":"john","pass":"doe"}}
```

RESPONSE:

Response: `{"result": [number of messages in database that wait to be processed by GSM-modem]}`

Sample response: `{"result":7}`

Response: `{"result": "Invalid login or password"}`

Response: `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Response:

```
{"result":{"queue_length":[number of messages in database that wait to be processed by GSM-modem],"status":"ok"}}
```

Sample response: `{"result": {"queue_length":"419","status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong parameters","status":"error"}}
```

13. Get inbox length: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/get_inbox_length`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/get_inbox_length?
login=john&pass=doe
```

RESPONSE:

Response: **[number of messages in database Inbox folder]**

Sample response: 3

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters): **Wrong parameters**

RESPONSE (XML):

Response:

```
<xml>
  <queue_length>
    [number of messages in database Inbox folder]
  </queue_length>
  <status>ok</status>
</xml>
```

Sample response:

```
<xml>
  <inbox_length>3</inbox_length>
  <status>ok</status>
</xml>
```

Response (when wrong logindata):

```
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>
```

Response (when wrong parameters):

```
<xml>
  <error_text>Wrong parameters</error_text>
  <status>error</status>
</xml>
```

14. Get inbox length: JSONRPC method

HTTP POST METHOD:

```
https://url-of-smseagle/index.php/jsonrpc/sms
```

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"sms.get_inbox_length",
"params":{"login":"john","pass":"doe"}}
```

RESPONSE:

Response: `{"result": "[number of messages in database Inbox folder]"}`

Sample response: 3

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters): `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Response:

```
{"result":{"inbox_length":[number of messages in database Inbox
folder],"status":"ok"}}
```

Sample response: `{"result": {"inbox_length":"3","status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong parameters","status":"error"}}
```

15. Get sentitems length: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/get_inbox_length`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/get_sentitems_length?
login=john&pass=doe
```

RESPONSE:

Response: **[number of messages in database Sentitems folder]**

Sample response: 21

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters): **Wrong parameters**

RESPONSE (XML):

Response:

```
<xml>
  <sentitems_length>
    [number of messages in database Inbox folder]
```

```
  </sentitems_length>
  <status>ok</status>
</xml>
```

Sample response:

```
<xml>
  <sentitems_length>21</sentitems_length>
  <status>ok</status>
</xml>
```

Response (when wrong logindata):

```
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>
```

Response (when wrong parameters):

```
<xml>
  <error_text>Wrong parameters</error_text>
  <status>error</status>
</xml>
```

16. Get sentitems length: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"sms.get_sentitems_length",
"params":{"login":"john","pass":"doe"}}
```

RESPONSE:

Response: `{"result": "[number of messages in database Sentitems folder]"}`
Sample response: `{"result": "21"}`
Response (when wrong logindata): `{"result": "Invalid login or password"}`
Response (when wrong parameters): `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Response:

```
{"result":{"sentitems_length":[number of messages in database Sentitems
folder],"status":"ok"}}
```

Sample response: `{"result": {"sentitems_length":"21","status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):
`{"result": {"error_text":"Wrong parameters","status":"error"}}`

17. Get GSM signal strength: HTTP GET method

SAMPLE QUERY:
`https://url-of-smseagle/index.php/http_api/get_gsmsignal`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
modem_no	*(optional parameter)* modem number to be queried (default = 1). Used only in multimodem devices
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:
`https://url-of-smseagle/index.php/http_api/get_gsmsignal?login=john&pass=doe&modem_no=1`

RESPONSE:
Response: **GSM signal strength in percent (values between 0-100).** If GSM modem is disconnected from GSM network, method returns -1
Sample response: 74
Response (when wrong logindata): **Invalid login or password**
Response (when wrong parameters): **Wrong parameters**

RESPONSE (XML):

Response:
```
<xml>
  <signal_strength>
    [GSM signal strength in percent (values between 0-100)]
  </signal_strength>
  <status>ok</status>
</xml>
```

Sample response:
```
<xml>
  <signal_strength>74</signal_strength>
  <status>ok</status>
</xml>
```

Response (when wrong logindata):
```
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>
```

Response (when wrong parameters):
```
<xml>
```

```
  <error_text>Wrong parameters</error_text>
  <status>error</status>
</xml>
```

18. Get GSM signal strength: JSONRPC method

HTTP POST METHOD CALL:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
modem_no	*(optional parameter)* modem number to be queried (default = 1). Used only in multimodem devices
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

BODY:

```
{"method":"signal.get_gsmsignal",
"params":{"login":"john","pass":"doe"}}
```

RESPONSE:

Response: `{"result": GSM signal strength in percent: values between 0-100. If GSM modem is disconnected from GSM network, method returns -1 }`
Sample response: `{"result":7}`
Response: `{"result": "Invalid login or password"}`
Response: `{"result": "Wrong parameters"}`

RESPONSE (EXTENDED):

Response:
`{"result":{"signal_strength":[number of messages in database Sentitems folder],"status":"ok"}}`

Sample response: `{"result": {"signal_strength":"7","status":"ok"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

19. Phonebook group create: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/group_create`

Parameter	Description
login	your user to login to SMSEagle

pass	your password to login to SMSEagle
groupname	name for the created group
public	*(optional parameter)* 0 = private group, 1 = public group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/group_create?
login=john&pass=doe&groupname=myusers&public=1
```

RESPONSE:

Response: **OK; ID=[ID of created group]**
Sample response: OK; ID=5
Response (when wrong logindata): **Invalid login or password**
Response (when wrong parameters): **Wrong or missing >>groupname<< parameter**

RESPONSE (XML):

Response:
```
<xml>
   <group_id>[ID of created group]</group_id>
   <status>ok</status>
</xml>
```

Sample response:
```
<xml>
   <group_id>5</group_id>
   <status>ok</status>
</xml>
```

Response (when wrong logindata):
```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```

Response (when wrong parameters):
```
<xml>
   <error_text>Wrong or missing >>groupname<< parameter</error_text>
   <status>error</status>
</xml>
```

20. Phonebook group create: JSONRPC method

HTTP POST METHOD:

```
https://url-of-smseagle/index.php/jsonrpc/sms
```

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle

groupname	name for the created group
public	*(optional parameter)* 0 = private group, 1 = public group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.group_create",
"params":{"login":"john","pass":"doe","groupname":"myusers","public":"1
"}}
```

RESPONSE:

Response: `{"result": "OK; ID=[ID of created group]"}`
Sample response: `{"result": "OK; ID=5"}`
Response (when wrong logindata): `{"result": "Invalid login or password"}`
Response (when wrong parameters): `{"result": "Wrong or missing >>groupname<< parameter"}`

RESPONSE (EXTENDED):

Response:
`{"result": {"group_id":"[ID of created group]","status":"ok"}}`

Sample response: `{"result": {"group_id":"748","status":"ok"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

Response (when wrong parameters):
`{"result": {"error_text":"Wrong parameters","status":"error"}}`

21. Phonebook group read: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/group_read`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
public	*(optional parameter)* 0 = private group (default value), 1 = public group
uid	*(optional parameter)* id of user who created the group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/group_read?
login=john&pass=doe&public=1&uid=12
```

RESPONSE:

Sample response: link

Response (when no data): **No data to display**
Response (when wrong logindata): **Invalid login or password**
Response (when wrong parameters):
Wrong or missing >>uid<< parameter
Wrong or missing >>public<< parameter

RESPONSE (XML):

Sample response:


```
<xml>
 <groups>
  <item>
   <Name>private</Name>
   <ID>2</ID>
   <id_user>2</id_user>
   <is_public>true</is_public>
  </item>
  <item>
   <Name>Everyone</Name>
   <ID>3</ID>
   <id_user>1</id_user>
   <is_public>true</is_public>
  </item>
  <item>
   <Name>work</Name>
   <ID>4</ID>
   <id_user>1</id_user>
   <is_public>true</is_public>
  </item></groups>
 <status>ok</status>
</xml>
```


Response (when no data):

```
<xml>
   <error_text>No data to display</error_text>
   <status>error</status>
</xml>
```


Response (when wrong logindata):

```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```


Response (when wrong parameters):

```
<xml>
   <error_text>Wrong or missing >>uid<< parameter</error_text>
   <status>error</status>
</xml>
```


Response (when wrong parameters):

```
<xml>
   <error_text>Wrong or missing >>public<< parameter</error_text>
   <status>error</status>
```

</xml>

22. Phonebook group read: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
public	*(optional parameter)* 0 = private group (default value), 1 = public group
uid	*(optional parameter)* id of user who created the group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.group_read",
"params":{"login":"john","pass":"doe","public":"1","uid":"12"}}
```

RESPONSE:

Sample response:

```
{"result":[
 {"Name":"private","ID":"2","id_user":"1","is_public":"true"},
 {"Name":"Everyone","ID":"3","id_user":"1","is_public":"true"},
 {"Name":"work","ID":"4","id_user":"2","is_public":"true"}
]}
```

Response (when no data): `{"result": "No data to display"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>uid<< parameter"}
{"result": "Wrong or missing >>public<< parameter"}
```

RESPONSE (EXTENDED):

Sample response:

```
{"result":[{"groups":[
 {"Name":"private","ID":"2","id_user":"1","is_public":"true"},
 {"Name":"Everyone","ID":"3","id_user":"1","is_public":"true"},
 {"Name":"work","ID":"4","id_user":"2","is_public":"true"}
],"status":"ok"}}
```

Response (when no data):

```
{"result": {"error_text":" No data to display","status":"error"}}
```

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong or missing >>uid<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>public<<
parameter","status":"error"}}
```

23. Phonebook group update: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/group_update`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group
groupname	name for the group
public (optional parameter)	0 = private group, 1 = public group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/group_update?
login=john&pass=doe&group_id=2&groupname=myusers&public=1
```

RESPONSE:

Response: **OK**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>groupname<< parameter

Wrong or missing >>group_id<< parameter

Response (when group_id is wrong): **Group with the given id does not exists**

RESPONSE (XML):

Response:

```
<xml>
  <status>ok</status>
</xml>
```

Response (when wrong logindata):

```
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>
```

Response (when wrong parameters):
<xml>
<error_text>Wrong or missing >>groupname<< parameter</error_text>
<status>error</status>
</xml>

<xml>
<error_text>Wrong or missing >>group_id<< parameter</error_text>
<status>error</status>
</xml>

Response (when group_id is wrong):
<xml>
<error_text>Group with the given id does not exists</error_text>
<status>error</status>
</xml>

24. Phonebook group update: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group
groupname	name for the group
public (optional parameter)	0 = private group, 1 = public group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.group_update",
"params":{"login":"john","pass":"doe","group_id":"2","groupname":"myuse
rs","public":"1"}}
```

RESPONSE:

Response: `{"result": "OK"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>groupname<< parameter"}
{"result": "Wrong or missing >>group_id<< parameter"}
```

Response (when group_id is wrong): `{"result": "Group with the given id does not exists"}`

RESPONSE (EXTENDED):

Response: `{"result":{"status":"ok"}}`

Response (when wrong logindata):
```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):
```
{"result": {"error_text":"Wrong or missing >>groupname<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>group_id<<
parameter","status":"error"}}
```

Response (when group_id is wrong):
```
{"result": {"error_text":"Group with the given id does not
exists","status":"error"}}
```

25. Phonebook group delete: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/group_delete`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group
groupname	name of existing group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/group_delete?
login=john&pass=doe&group_id=2&groupname=myusers
```

RESPONSE:

Response: **OK**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>groupname<< parameter

Wrong or missing >>group_id<< parameter

Response (when group_id is wrong): **Group with the given id and name does not exist**

RESPONSE (XML):

Response:
```
<xml>
  <status>ok</status>
</xml>
```

Response (when wrong logindata):
```
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
```

</xml>

Response (when wrong parameters):
<xml>
<error_text>Wrong or missing >>groupname<< parameter</error_text>
<status>error</status>
</xml>

<xml>
<error_text>Wrong or missing >>group_id<< parameter</error_text>
<status>error</status>
</xml>

Response (when group_id is wrong):
<xml>
<error_text>Group with the given id does not exists</error_text>
<status>error</status>
</xml>

26. Phonebook group delete: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group
groupname	name of existing group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.group_delete",
"params":{"login":"john","pass":"doe","group_id":"2","groupname":"myuse
rs"}}
```

RESPONSE:

Response: `{"result": "OK"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>groupname<< parameter"}
{"result": "Wrong or missing >>group_id<< parameter"}
```

Response (when group_id is wrong): `{"result": "Group with the given id and name does not exist"}`

RESPONSE (EXTENDED):

Response: `{"result":{"status":"ok"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

Response (when wrong parameters):
`{"result": {"error_text":"Wrong or missing >>groupname<< parameter","status":"error"}}`

`{"result": {"error_text":"Wrong or missing >>group_id<< parameter","status":"error"}}`

Response (when group_id is wrong):
`{"result": {"error_text":"Group with the given id does not exists","status":"error"}}`

27. Phonebook group add contact: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/group_addcontact`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group (or id's separated with comma)
contact_id	id of contact. The contact will be added to the group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

`https://url-of-smseagle/index.php/http_api/group_addcontact?login=john&pass=doe&group_id=2&contact_id=1`

RESPONSE:

Response: **OK**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>group_id<< parameter

Wrong or missing >>contact_id<< parameter

Response (when id is wrong):

Group with the given id does not exists

Contact with the given id does not exists

RESPONSE (XML):

Response:
<xml>
  <status>ok</status>

```
</xml>
```

Response (when wrong logindata):

```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```

Response (when wrong parameters):

```
<xml>
   <error_text>Wrong or missing >>group_id<< parameter</error_text>
   <status>error</status>
</xml>

<xml>
   <error_text>Wrong or missing >>contact_id<< parameter</error_text>
   <status>error</status>
</xml>
```

Response (when id is wrong):

```
<xml>
   <error_text>Group with the given id does not exists</error_text>
   <status>error</status>
</xml>

<xml>
   <error_text>Contact with the given id does not exists</error_text>
   <status>error</status>
</xml>
```

28. Phonebook group add contact: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group (or id's separated with comma)
contact_id	id of contact. The contact will be added to the group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.group_addcontact",
"params":{"login":"john","pass":"doe","group_id":"2","contact_id":"1"}}
```

RESPONSE:

Response: `{"result": "OK"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`
Response (when wrong parameters):
`{"result": "Wrong or missing >>group_id<< parameter"}`
`{"result": "Wrong or missing >>contact_id<< parameter"}`
Response (when id is wrong):
`{"result": "Group with the given id does not exists"}`
`{"result": "Contact with the given id does not exists"}`

RESPONSE (EXTENDED):
Response: `{"result":{"status":"ok"}}`

Response (when wrong logindata):
`{"result": {"error_text":"Invalid login or password","status":"error"}}`

Response (when wrong parameters):
```
{"result": {"error_text":"Wrong or missing >>group_id<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>contact_id<<
parameter","status":"error"}}
```

Response (when id is wrong):
```
{"result": {"error_text":"Group with the given id does not
exists","status":"error"}}

{"result": {"error_text":"Contact with the given id does not
exists","status":"error"}}
```

29. Phonebook group remove contact: HTTP GET method

HTTP GET METHOD:
`https://url-of-smseagle/index.php/http_api/group_removecontact`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group (or id's separated with comma)
contact_id	id of contact. The contact will be removed from the group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:
```
https://url-of-smseagle/index.php/http_api/group_removecontact?
login=john&pass=doe&group_id=2&contact_id=1
```

RESPONSE:
Response: **OK**
Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):
Wrong or missing >>group_id<< parameter
Wrong or missing >>contact_id<< parameter
Response (when id is wrong):
Group with the given id does not exists
Contact with the given id does not exists

RESPONSE (XML):

Response:
```
<xml>
   <status>ok</status>
</xml>
```

Response (when wrong logindata):
```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```

Response (when wrong parameters):
```
<xml>
   <error_text>Wrong or missing >>group_id<< parameter</error_text>
   <status>error</status>
</xml>
```

```
<xml>
   <error_text>Wrong or missing >>contact_id<< parameter</error_text>
   <status>error</status>
</xml>
```

Response (when id is wrong):
```
<xml>
   <error_text>Group with the given id does not exists</error_text>
   <status>error</status>
</xml>
```

```
<xml>
   <error_text>Contact with the given id does not exists</error_text>
   <status>error</status>
</xml>
```

30. Phonebook group remove contact: JSONRPC method

HTTP POST METHOD:
`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
group_id	id of existing group (or id's separated with comma)

contact_id	id of contact. The contact will be removed from the group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.group_removecontact",
"params":{"login":"john","pass":"doe","group_id":"2","contact_id":"1"}}
```

RESPONSE:

Response: `{"result": "OK"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>group_id<< parameter"}
{"result": "Wrong or missing >>contact_id<< parameter"}
```

Response (when id is wrong):

```
{"result": "Group with the given id does not exists"}
{"result": "Contact with the given id does not exists"}
```

RESPONSE (EXTENDED):

Response: `{"result":{"status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong or missing >>group_id<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>contact_id<<
parameter","status":"error"}}
```

Response (when id is wrong):

```
{"result": {"error_text":"Group with the given id does not
exists","status":"error"}}

{"result": {"error_text":"Contact with the given id does not
exists","status":"error"}}
```

31. Phonebook contact create: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/contact_create`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle

contactname	name for the created contact
number	telephone number for the created contact
public	*(optional parameter)* 0 = private contact, 1 = public contact (default value)
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/contact_create?
login=john&pass=doe&contactname=johndoe&number=12345678&public=1
```

RESPONSE:

Response: **OK; ID=[ID of created contact]**

Sample response: OK; ID=2

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>contactname<< parameter

Wrong or missing >>number<< parameter

RESPONSE (XML):

Response:

```
<xml>
   <contact_id>[ID of created contact]</contact_id>
   <status>ok</status>
</xml>
```

Sample response:

```
<xml>
   <contact_id>2</contact_id>
   <status>ok</status>
</xml>
```

Response (when wrong logindata):

```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```

Response (when wrong parameters):

```
<xml>
   <error_text>Wrong or missing >>contactname<< parameter</error_text>
   <status>error</status>
</xml>

<xml>
   <error_text>Wrong or missing >>number<< parameter</error_text>
   <status>error</status>
</xml>
```

32. Phonebook contact create: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
contactname	name for the created contact
number	telephone number for the created contact
public	*(optional parameter)* 0 = private contact 1 = public contact (default value)
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.contact_create",
"params":{"login":"john","pass":"doe","contactname":"johndoe","number":
"12345678","public":"1"}}
```

RESPONSE:

Response: `{"result": "OK; ID=[ID of created contact]"}`

Sample response: `{"result": "OK; ID=2"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>contactname<< parameter"}
{"result": "Wrong or missing >>number<< parameter"}
```

RESPONSE (EXTENDED):

Response:

```
{"result": {"contact_id":"[ID of created contact]","status":"ok"}}
```

Sample response: `{"result": {"contact_id":"2","status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong or missing >>contactname<<
parameter"},"status":"error"}}

{"result": {"error_text":"Wrong or missing >>number<<
parameter","status":"error"}}
```

33. Phonebook contact read: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/contact_read`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
public	*(optional parameter)* 0 = private contacts (default value), 1 = public contacts
uid	*(optional parameter)* id of user who created the contact
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/contact_read?
login=john&pass=doe&public=1&uid=12
```

RESPONSE:

Sample response: link

Response (when no data): **No data to display**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>uid<< parameter

Wrong or missing >>public<< parameter

RESPONSE (XML):

Sample response:


```
<xml>
 <contacts>
  <item>
   <ID>2</ID>
   <GroupID>-1</GroupID>
   <Name>John Doe</Name>
   <Number>123123123</Number>
   <id_user>1</id_user>
   <is_public>true</is_public>
  </item>
  <item>
   <ID>4</ID>
   <GroupID>-1</GroupID>
   <Name>Jan Nowak</Name>
   <Number>4215456456</Number>
   <id_user>1</id_user>
   <is_public>true</is_public>
  </item>
  <item>
   <ID>5</ID>
```

```
  <GroupID>-1</GroupID>
  <Name>Andy</Name>
  <Number>+441234155931</Number>
  <id_user>1</id_user>
  <is_public>true</is_public>
 </item>
</contacts>
<status>ok</status>
</xml>
```


Response (when no data):


```
<xml>
   <error_text>No data to display</error_text>
   <status>error</status>
</xml>
```


Response (when wrong logindata):


```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```


Response (when wrong parameters):


```
<xml>
   <error_text>Wrong or missing >>uid<< parameter</error_text>
   <status>error</status>
</xml>

<xml>
   <error_text>Wrong or missing >>public<< parameter</error_text>
   <status>error</status>
</xml>
```


34. Phonebook contact read: HTTP GET method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
public	*(optional parameter)* 0 = private contacts (default value), 1 = public contacts
uid	*(optional parameter)* id of user who created the contact
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:


```
{"method":"phonebook.contact_read",
"params":{"login":"john","pass":"doe","public":"1","uid":"12"}}
```

RESPONSE:

Sample response:


```
{"result":[
 {"ID":"2","GroupID":"-1","Name":"John
Doe","Number":"123123123","id_user":"1","is_public":"false"},
 {"ID":"4","GroupID":"-1","Name":"Jan
Nowak","Number":"4215456456","id_user":"1","is_public":"false"},
 {"ID":"5","GroupID":"-
1","Name":"Andy","Number":"+441234155931","id_user":"1","is_public":"fa
lse"}
]}
```


Response (when no data): `{"result": "No data to display"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>uid<< parameter"}
{"result": "Wrong or missing >>public<< parameter"}
```

RESPONSE (EXTENDED):

Sample response:


```
{"result":{"contacts":[
 {"ID":"2","GroupID":"-1","Name":"John
Doe","Number":"123123123","id_user":"1","is_public":"false"},
 {"ID":"4","GroupID":"-1","Name":"Jan
Nowak","Number":"4215456456","id_user":"1","is_public":"false"},
 {"ID":"5","GroupID":"-
1","Name":"Andy","Number":"+441234155931","id_user":"1","is_public":"fa
lse"}
],"status":"ok"}}
```


Response (when no data):

```
{"result": {"error_text":" No data to display","status":"error"}}
```

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong or missing >>uid<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>public<<
parameter","status":"error"}}
```

35. Phonebook contact update: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/contact_update`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
contact_id	id of existing contact
contactname	name for the contact
number	phone number for the contact
public (optional parameter)	0 = private group, 1 = public group
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:

```
https://url-of-smseagle/index.php/http_api/contact_update?
login=john&pass=doe&contact_id=4&contactname=johnlord&number=123456789&
public=1
```

RESPONSE:

Response: **OK**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>contactname<< parameter

Wrong or missing >>contact_id<< parameter

Wrong or missing >>number<< parameter

Response (when contact_id is wrong): **Contact with the given id does not exists**

RESPONSE (XML):

Response:

```
<xml>
   <status>ok</status>
</xml>
```

Response (when wrong logindata):

```
<xml>
   <error_text>Invalid login or password</error_text>
   <status>error</status>
</xml>
```

Response (when wrong parameters):

```
<xml>
   <error_text>Wrong or missing >>contactname<< parameter</error_text>
   <status>error</status>
```

```
</xml>

<xml>
   <error_text>Wrong or missing >>contact_id<< parameter</error_text>
   <status>error</status>
</xml>

<xml>
   <error_text>Wrong or missing >>number<< parameter</error_text>
   <status>error</status>
</xml>
```

Response (when contact_id is wrong):

```
<xml>
   <error_text>Contact with the given id does not exists</error_text>
   <status>error</status>
</xml>
```

36. Phonebook contact update: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
contact_id	id of existing contact
contactname	name for the contact
number	phone number for the contact
public (optional parameter)	0 = private group, 1 = public group
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.contact_update",
"params":{"login":"john","pass":"doe","contact_id":"4","contactname":"j
ohnlord","number":"123456789","public":"1"}}
```

RESPONSE:

Response: `{"result": "OK"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>contactname<< parameter"}
{"result": "Wrong or missing >>contact_id<< parameter"}
{"result": "Wrong or missing >>number<< parameter"}
```

Response (when contact_id is wrong): `{"result": "Contact with the given id does not exists"}`

RESPONSE (EXTENDED):

Response: `{"result":{"status":"ok"}}`

Response (when wrong logindata):
```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):
```
{"result": {"error_text":"Wrong or missing >>contactname<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>contact_id<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>number<<
parameter","status":"error"}}
```

Response (when contact_id is wrong):
```
{"result": {"error_text":"Contact with the given id does not
exists","status":"error"}}
```

37. Phonebook contact delete: HTTP GET method

HTTP GET METHOD:

`https://url-of-smseagle/index.php/http_api/contact_delete`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
contact_id	id of existing contact
contactname	name of existing contact
responsetype	*(optional parameter)* text = format response as text (default), xml = format response as XML object

EXAMPLES:
```
https://url-of-smseagle/index.php/http_api/contact_delete?
login=john&pass=doe&contact_id=4&contactname=johnlord
```

RESPONSE:

Response: **OK**

Response (when wrong logindata): **Invalid login or password**

Response (when wrong parameters):

Wrong or missing >>contactname<< parameter

Wrong or missing >>contact_id<< parameter

Response (when contact_id is wrong): **Contact with the given id and name does not exists**

RESPONSE (XML):

Response:
<xml>
  <status>ok</status>
</xml>

Response (when wrong logindata):
<xml>
  <error_text>Invalid login or password</error_text>
  <status>error</status>
</xml>

Response (when wrong parameters):
<xml>
  <error_text>Wrong or missing >>contactname<< parameter</error_text>
  <status>error</status>
</xml>

<xml>
  <error_text>Wrong or missing >>contact_id<< parameter</error_text>
  <status>error</status>
</xml>

Response (when contact_id is wrong):
<xml>
  <error_text>Contact with the given id and name does not exists </error_text>
  <status>error</status>
</xml>

38. Phonebook contact delete: JSONRPC method

HTTP POST METHOD:

`https://url-of-smseagle/index.php/jsonrpc/sms`

Parameter	Description
login	your user to login to SMSEagle
pass	your password to login to SMSEagle
contact_id	id of existing contact
contactname	name of existing contact
responsetype	*(optional parameter)* simple = format response as simple object with one result field (default), extended = format response as extended JSON object

EXAMPLES:

```
{"method":"phonebook.contact_delete",
"params":{"login":"john","pass":"doe","contact_id":"4","contactname":"j
ohnlord"}}
```

RESPONSE:

Response: `{"result": "OK"}`

Response (when wrong logindata): `{"result": "Invalid login or password"}`

Response (when wrong parameters):

```
{"result": "Wrong or missing >>contactname<< parameter"}
{"result": "Wrong or missing >>contact_id<< parameter"}
```

Response (when contact_id is wrong): `{"result": "Contact with the given id and name does not exists"}`

RESPONSE (EXTENDED):

Response: `{"result":{"status":"ok"}}`

Response (when wrong logindata):

```
{"result": {"error_text":"Invalid login or password","status":"error"}}
```

Response (when wrong parameters):

```
{"result": {"error_text":"Wrong or missing >>contactname<<
parameter","status":"error"}}

{"result": {"error_text":"Wrong or missing >>contact_id<<
parameter","status":"error"}}
```

Response (when contact_id is wrong):

```
{"result": {"error_text":"Contact with the given id and name does not
exists","status":"error"}}
```

Plugins and integration manuals for NMS & Auth systems

SMSEagle has a number of ready-to-use plugins and integration manuals for an easy and quick integration of SMSEagle device with external software (Network Monitoring Systems, Authentication Systems and other). The list grows constantly and is published on SMSEagle website. For a complete and up-to-date list of plugins please go to: http://www.smseagle.eu/integration-plugins/

Connecting directly to SMSEagle database

SMSeagle's database operates on PostgreSQL database engine. It is possible to connect to the database from external application using the following credentials:

PostgreSQL database credentials
Host: IP address of your SMSEagle
Database name: smseagle
User: postgres
Password: postgreeagle

SNMP agent

"Simple Network Management Protocol (SNMP) is an Internet-standard protocol for managing devices on IP networks. It is used mostly in network management systems to monitor network-attached devices for conditions that warrant administrative attention" (source: Wikipedia).

SMSeagle device has a built-in Net-SNMP agent. The SNMP agent provides access to Linux Host MIB tree of the device, and additionally (using extension NET-SNMP-EXTEND-MIB) allows access to custom metrics specific to SMSEagle.

Available SNMP metrics that describe a state of a SMSEagle device are:

Metric name	Description	OID
GSM_Signal	Returns GSM signal strength in percent. Value range: 0-100. If modem is disconnected from GSM network GSM_Signal returns 0.	.1.3.6.1.4.1.8072.1.3.2.3.1.2.11.71.83.77.95.83.105.103.110.97.108.49
FolderOutbox_Total	Returns number of SMS messages in Outbox folder (outgoing queue length)	.1.3.6.1.4.1.8072.1.3.2.3.1.2.18.70.111.108.100.101.114.79.117.116.98.111.120.95.84.111.116.97.108
FolderInbox_Total	Returns number of SMS messages in Inbox folder	.1.3.6.1.4.1.8072.1.3.2.3.1.2.17.70.111.108.100.101.114.73.110.98.111.120.95.84.111.116.97.108
FolderSent_Last24H	Returns number of SMS messages sent from the device within last 24 hours	.1.3.6.1.4.1.8072.1.3.2.3.1.2.18.70.111.108.100.101.114.83.101.110.116.95.76.97.115.116.50.52.72
FolderSent_Last1M	Returns number of SMS messages sent from the device within last month	.1.3.6.1.4.1.8072.1.3.2.3.1.2.17.70.111.108.100.101.114.83.101.110.116.95.76.97.115.116.49.77
FolderSent_Last24HSendErr	Returns number of SMS messages sent with error within last 24h. Error occurs when GSM modem cannot send SMS message or message is rejected by GSM carrier (mostly happens when a credit on pre-paid SIM card is over)	.1.3.6.1.4.1.8072.1.3.2.3.1.2.25.70.111.108.100.101.114.83.101.110.116.95.76.97.115.116.50.52.72.83.101.110.100.69.114.114

RESULT VALUES

- Using OID

Result values for each custom metric are available and can be fetched from OID given in table above.

- Using textual name

Alternatively result values for each custom metric can be fetched using textual names from OID tree under: NET-SNMP-EXTEND-MIB::nsExtendOutputFull."[METRIC NAME]"

For example:
*Result value for parameter **GSM_Signal**:*
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."GSM_Signal"

If your chosen SNMP tool cannot access NET-SNMP-EXTEND-MIB objects, you can download MIB definitions from: http://www.smseagle.eu/download/NET-SNMP-EXTEND-MIB.txt

READING RESULT VALUES

In order to test-read the parameter values from SNMP agent you can use any tools available for SNMP protocol (for example: NET-SNMP library for Linux or iReasoning MiB-Browser for Windows).

EXAMPLE OF READING GSM_SIGNAL VALUE USING NET-SNMP LIBRARY

a) Command for reading the result value:

```
snmpget -v 2c -c public localhost
.1.3.6.1.4.1.8072.1.3.2.3.1.2.11.71.83.77.95.83.105.103.110.97.108.49
```

Result:

```
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."GSM_Signal" = STRING: 54
```

Comment: GSM Signal strength value is 54%

EXAMPLE OF READING FOLDEROUTBOX_TOTAL VALUE USING NET-SNMP LIBRARY (AND TEXTUAL NAME OF METRIC)

a) Command for reading the result value:

```
snmpget -v 2c -c public ip-of-smseagle 'NET-SNMP-EXTEND-
MIB::nsExtendOutputFull."FolderOutbox_Total"'
```

Result:

```
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."FolderOutbox_Total" = STRING: 0
```

Comment: Number of SMS messages waiting in outbox queue is 0

EXAMPLE OF READING SYSTEMUPTIME FROM LINUX HOST USING NET-SNMP LIBRARY

a) Command for reading the result value:

```
snmpget -v 2c -c public ip-of-smseagle system.sysUpTime.0
```

Result:

```
DISMAN-EVENT-MIB::sysUpTimeInstance = Timeticks: (216622) 0:36:06.22
```

Comment: Linux system is up for 36 hours, 6.22 minutes

EXAMPLE OF BROWSING SMSEAGLE EXTENSION PARAMETERS IN MIB TREE USING NET-SNMP LIBRARY

a) Command for reading the result value:

```
snmpwalk -v 2c -c public ip-of-smseagle .1.3.6.1.4.1.8072.1.3.2.3.1.2
```

Result:

NET-SNMP-EXTEND-MIB::nsExtendOutputFull."GSM_Signal" = STRING: 54
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."FolderInbox_Total" = STRING: 15
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."FolderSent_Last1M" = STRING: 19
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."FolderOutbox_Total" = STRING: 0
NET-SNMP-EXTEND-MIB::nsExtendOutputFull."FolderSent_Last24H" = STRING: 0
NET-SNMP-EXTEND-MIB::nsExtendOutputFull." FolderSent_Last24HSendErr" = STRING: 0

EXAMPLE OF BROWSING SMSEAGLE EXTENSION PARAMETERS IN MIB TREE USING MIB-BROWSER

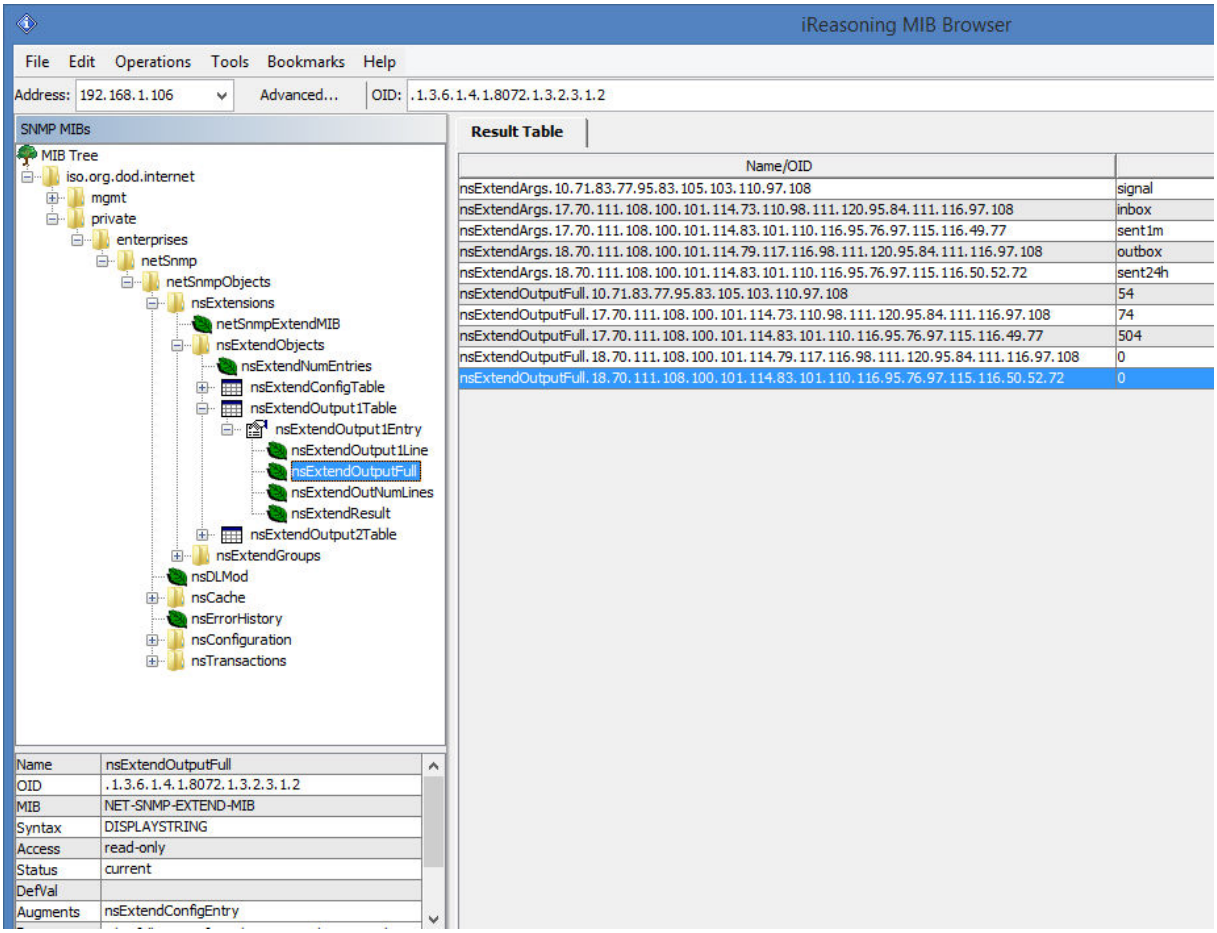

Database cleaning scripts

We have added some useful scripts which may be used to delete SMS messages from database through Linux CLI.

Scripts are located at following directory:
`/mnt/nand-user/scripts/`

- **`db_delete`** – script for deleting SMS from folders Inbox, SentItems older than provided date. Usage:
  `./db_delete YYYYMMDDhhmm`

- **`db_delete_7days`** – script for deleting SMS from folders Inbox, Sentitems older than 7 days. Usage:
  `./db_delete_7days`

- **`db_delete_allfolders`** – script for cleaning PostgreSQL database folders (Inbox, SentItems, Outbox). Specially designed to run periodically through *cron.* Usage:
  `./db_delete_allfolders`

- **`db_delete_select -`** script for deleting SMS from chosen databse folder (Inbox, Outbox, SentItems, Trash). Usage:
  `./db_delete_select {inbox|outbox|sentitems|trash}`

Adding script to system *cron* daemon

1) Create a file inside *`/etc/cron.d/`* directory with your desired name (eg. *`pico db_cleaner`*)
2) Example content of this file:

```
0 0 1 * * root /mnt/nand-user/scripts/db_delete_allfolders
```

This will run cleaning script every 1st day of month.

Failover (HA-cluster) feature

"High-availability clusters (also known as HA clusters or fail over clusters) are groups of computers (...) that can be reliably utilized with a minimum of down-time. They operate by using high availability software to harness redundant computers in groups or clusters that provide continued service when system components fail. Without clustering, if a server running a particular application crashes, the application will be unavailable until the crashed server is fixed. HA clustering remedies this situation by detecting hardware/software faults, and immediately restarting the application on another system or whole node without requiring administrative intervention, a process known as failover." (source: Wikipedia)

SMSEagle NXS family has its own HA-cluster feature. For service to work you need at least 2 gateways ('aka' nodes). Our service monitors devices working in cluster and detects faults with following functions:

1. *Apache2 WWW server*
2. *PostgreSQL database*
3. *SNMP agent*
4. *Modem software (Gammu-SMSD daemon)*
5. *Accessibility (response to ping) of whole node.*

Every node in a cluster can have one of three states:

- Master: first healthy node which became available in a cluster, and is accessible through Virtual IP
- Backup: second healthy node in a cluster, ready and waiting for replacing Master when needed
- Fault: node with detected service fault

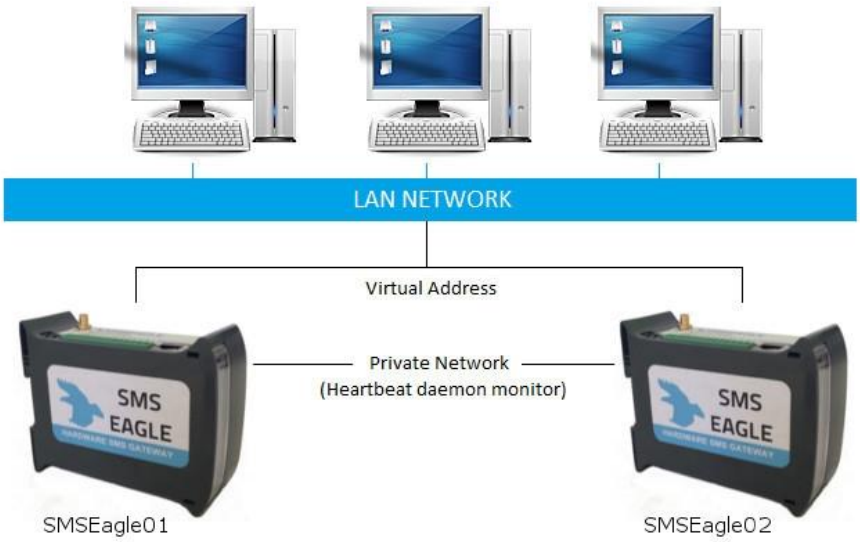

Basically devices (nodes) should see each other on the network. By default HA-nodes use 224.0.0.18 IP address for VRRP (Virtual Router Redundancy Protocol) for communication between two nodes for health check. If nodes are on the same network (same subnet & IP range) there is no need for any network configuration. If two nodes are behind firewalls, make sure firewall is configured to accept multicast and VRRP protocol (IP Protocol #112).

When the daemon running at MASTER device detects failure of at least one described features it immediately automatically switches cluster's IP assignment to the BACKUP device (node) providing continuous usage of the SMSEagle HA-cluster for the user.

HOW TO CONFIGURE FAILOVER (HA-CLUSTER):

Failover cluster can be easily configured using web-gui. Configuration can be done in menu “Settings” > tab “Failover”. For each device in failover cluster:

- enter virtual IP address in the field “Virtual IP Address”
- set “Enable Failover cluster” to “Yes”.

Save configuration. **Reboot** each device after saving.

Screenshot from “General settings-Failover”

A device that boots first becomes MASTER in failover cluster, second and next devices are BACKUPs. In the cluster you have one MASTER device and at least one BACKUP device (depending of number of nodes). The HA-cluster will automatically switch between physical devices depending on the node health-check.

After correct configuration of the HA-cluster **you should access the cluster via its Virtual IP address.**

Alternatively configuration may be also made using Linux command line:

1. Log in via SSH using *root* account
2. Navigate to:
   cd /mnt/nand-user/smseagle/keepalived/
3. Configuration script:
   ./failover

```
SMSEagle Failover Cluster feature presents:
Usage /mnt/nand-user/smseagle/keepalived/failover [start] | [stop] | [status] |
[config VIRTUAL_IP_ADDRESS]
  where:
    - start: add failover cluster to autorun and start the service
    - stop: remove failover cluster from autorun and stops the service
    - status: check the status of failover clusters node
    - config: set up Virtual IP Address
```

4. First run:
   ./failover config VIRTUAL_IP_ADDRESS
   This will setup your Virtual IP address for your cluster

5. Then run:
   ./failover start
   which will run the Failover service
6. You can check device state with:
   ./failover status
7. You can always disable service with:
   ./failover stop

Above commands have to be done on each device (node) of HA-cluster!

After correct configuration of HA-cluster you should access the whole cluster via its Virtual IP address. In the cluster you have one MASTER device and at least one BACKUP device (depending of number of nodes). The HA-cluster will automatically switch between physical devices depending on the node health-check.

SNMP-MONITORING

Failover feature uses KEEPALIVED-MIB for SNMP monitoring

*EXAMPLE OF READING **DEVICE CLUSTER STATE** VALUE USING NET-SNMP LIBRARY*

a) Command for reading the result value:

```
snmpget -v 2c -c public ip-of-smseagle .1.3.6.1.4.1.9586.100.5.2.3.1.4.1
```

Result:

```
KEEPALIVED-MIB::vrrpInstanceState.1 = INTEGER: master(2)
```

Comment: Current device state is `master`

3. TROUBLESHOOTING

To make sure that the device is working properly, follow the three steps:

1. Verification of LEDs
2. Checking the device configuration (IP Settings)
3. Check the device logs (description below)

Verification of LEDs

Normal operation of the device is signaled by LEDs as follows:

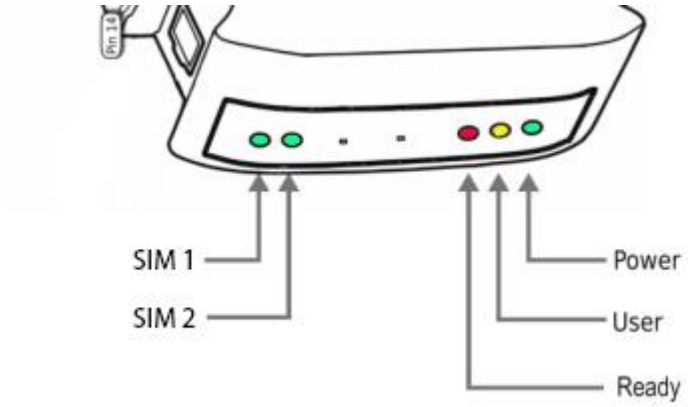

LED	Correct operation
Power (PWR)	Continuously lit
User	Blinks during flashdisk read/write
Ready (RDY)	Blinking
SIM1	Slow flashing in stand-by mode, Quick flashing when modem 1 in use
SIM2 (optional)	Slow flashing in stand-by mode, Quick flashing when modem 2 in use

Checking the device logs

SMSEagle operates on Linux system. Linux system log is available under menu position “Settings” > “Logs”. In case of any problems with the device this log is a valuable source of troubleshooting information.

Please attach information from this log when contacting with SMSEagle Support Team.

When the device is not reachable

1. Check if the device is correctly connected to the network. Check LED status of RJ45 socket.

2. In the case when the device does not respond due to a malfunction or incorrect user settings please reboot the device by disconnecting and connecting power source (or pressing Reset switch).

3. If you still cannot connect with the device, it is possible to restore to factory IP settings by using the SW button.

Restoring factory defaults

This action restores the following settings to default values: **IP settings, timezone settings, database content**, **Linux OS users/passwords**

In order to restore factory defaults proceed with the following steps:

LED signaling	USER actions	System reaction
RDY LED signal	1. **When the device is ready to operate**	
	2. **Press and hold SW button for 10 seconds**	Restore service is counting down.
USER LED signal	3. **Release SW button after 10 seconds.** User LED will begin to blink.	System is reading factory defaults. Factory settings are being applied to the device.
RDY LED signal 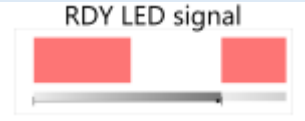 USER LED signal	4. **Wait until system reboots.** Default settings are restored.	System is going for a reboot.

Please note, that after reboot the device will be finishing the process of factory reset, therefore it can take longer for the system to start.

5. SERVICE AND REPAIR

Warranty

Your SMSEagle comes with 14 days of post-sales technical support (including assistance in integration with external software) and one year of hardware repair warranty coverage. For a detailed information on warranty terms and conditions check warranty card that comes with your device or follow the link: www.smseagle.eu/docs/general_warranty_terms_and_conditions.pdf

Service

Before contacting with support team, be sure that you have read Troubleshooting section of this manual. SMSEagle Support Team is available by email or telephone.

Support Email: support@smseagle.eu

Support telephone: + 48 796 200 723

The support service is provided by:
Proximus Software
ul. Piątkowska 163,
60-650 Poznan, Poland

WHEN CONTACTING SUPPORT TEAM, BE PREPARED TO PROVIDE THE FOLLOWING INFORMATION:

System Information

To get information about your SMSEagle, login to SMSEagle web interface, and proceed to menu “Settings” > “Sysinfo”. You will find there information about application version, and database version, modem IMEI.

System Logs

In order to access the logs content, login to SMSEagle web interface, and proceed to menu “Settings” > “Sysinfo”. If possible copy the log data and provide to support team when requested.

MAC address

Each SMSEagle device has its unique MAC address. MAC address is printed on the device body. Alternatively it can be also checked in SMSEagle web interface, menu “Settings” > “IP Settings”.

6. TECH SPECS AND SAFETY INFORMATION

Technical Specifications

Hardware Specification

- Processor type: Broadcom BCM2835 ARM11 0.7GHz SoC
- 512 MB SDRAM @ 400 MHz
- Network interface: Ethernet 10/100 TX (1xRJ45)
- 4GB Flash disk
- 1x USB 2.0 port
- 1x HDMI port
- 2x RS232 serial ports
- 2x DO/DI GPIO ports
- RTC Clock: RTC 240B SRAM, Watchdog timer
- Humidity & temperature sensor
- Power consumption: max 47W
- Noise level: Fan-less
- Dimensions: (width x depth x height) 35 x 120 x 101 mm
- Weight: 350g
- Casing: ABS, DIN rail installation
- Operating parameters:
    - Operating temperature: 10 ~ 60°C
    - Humidity: 5 ~ 95% RH (no condensation)
- 2 x Modem 3G:
    - Waveband: GSM, UMTS
    - GSM/GPRS quad-band 850/900/1800/1900 MHz
    - UMTS 800/850/900/AWS1700/1900/2100 MHz,
- SIM card standard: mini
- Antenna connector: SMA
- Country of origin: European Union (Poland)

Power Supply

AC line input

Voltage ranges: 100–240 V alternating current (AC)

Frequency: 50–60Hz single phase

GSM Antenna

2x Omnidirectional 3.5dBi antenna with magnetic foot

Cable length 3m

Sending/Receiving Throughput

- Incoming transmission rate: up to 60 SMS/min
- Outgoing transmission rate: up to 40 SMS/min
- API send SMS requests: 60 SMS/min (messages are queued for sending in a built-in database)

Software Platform

- Operating system: Linux kernel 4.1
- built-in Apache2 web server
- built-in PostgreSQL database server
- built-in Postfix email server
- built-in Failover (HA-cluster) service
- watchdog mechanism for 3G modem
- modern responsive web interface

Important Safety Information

This chapter provides important information about safety procedures. For your safety and that of your equipment, follow these rules for handling your device.

WARNING: Incorrect storage or use of your device may void the manufacturer's warranty. Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

Always take the following precautions.

Disconnect the power plug from AC power source or if any of the following conditions exist:

- the power cord or plug becomes frayed or otherwise damaged
- you spill something into the case
- the device is exposed to rain or any other excess moisture
- the device has been dropped or the case has been otherwise damaged

DISCLAIMER: The manufacturer is not responsible for any damages caused by inappropriate installation, not maintaining the proper technical condition or using a product against its destination.

The manufacturer excludes all liability for damages arising out of or in connection with your use of the equipment. This includes, without limitation, direct loss, loss of business or profits (whether or not the loss of such profits was foreseeable, arose in the normal course of things or you have advised this Company of the possibility of such potential loss) or any other direct or indirect, consequential and incidental damages. The above exclusions and limitations apply only to the extent permitted by law.

FCC compliance statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note:
This equipment has been tested and found to comply with the limits for a Class A device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a business/commercial non-residential environment. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important:
This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense. The FCC regulations provide that changes or modifications not expressly approved by SMSEagle™ could void your authority to operate this equipment. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices (antennas) and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

Canadian regulatory statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class A digital apparatus meets the requirements of the Canadian Interference-Causing Equipment Regulations.

CAN ICES-3 (A)/NMB-3(A)

Disposal and recycling information

Your SMSEagle device contains lithium-ion battery for RTC backup. Dispose of the device and/or battery in accordance with local environmental laws and guidelines.

European Union—Disposal Information

The symbol above means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.